




Installation and Assembly: Outdoor Weather Resistant Enclosure

Models: HDS-OWRE-300

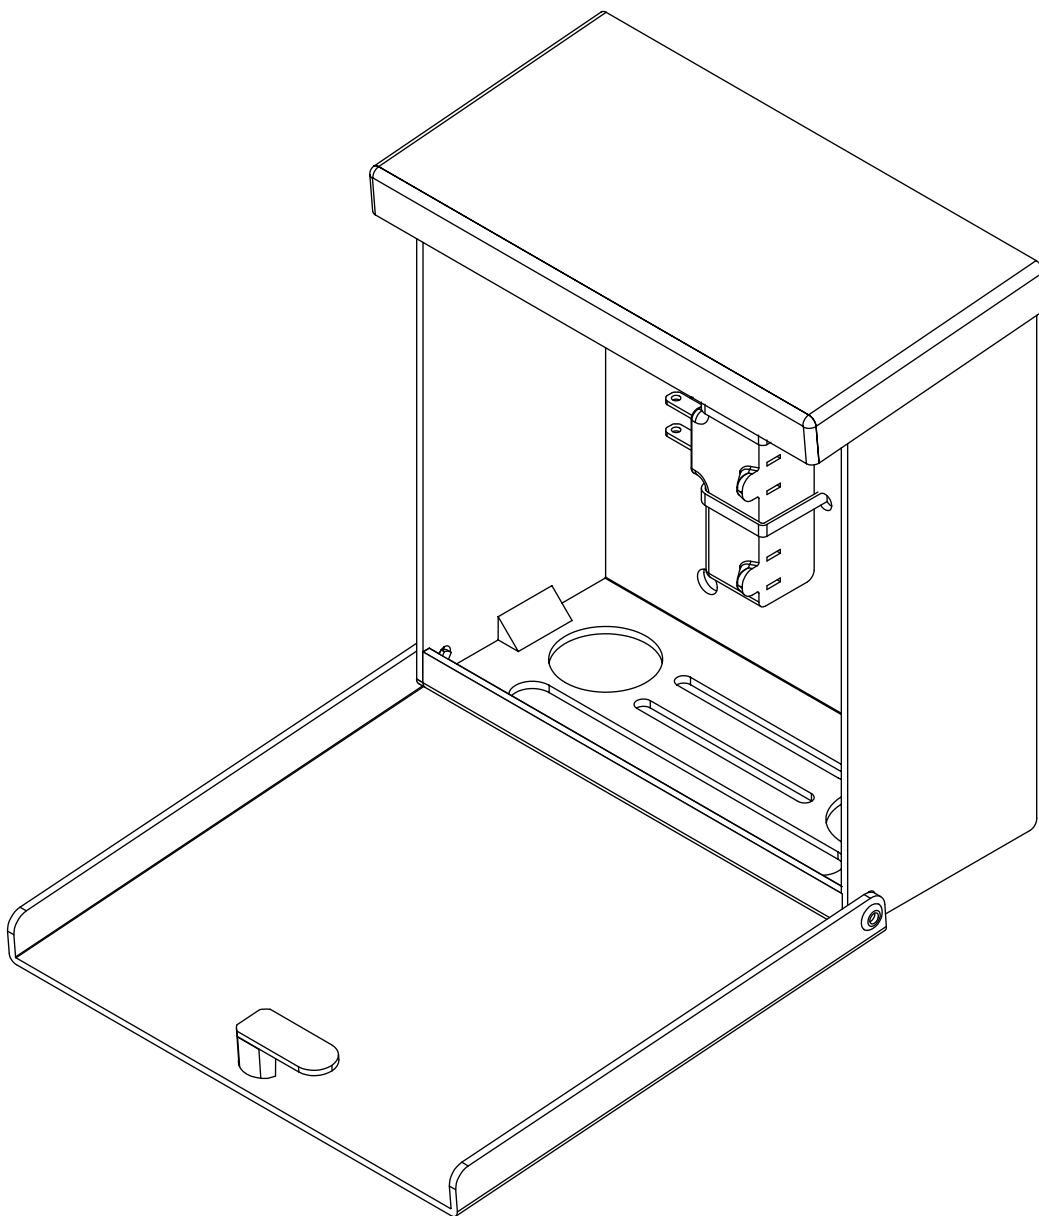

Note: Read entire instruction sheet before you start installation and assembly.

WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Due to outdoor environmental conditions such as heavy snow, hail, rain, etc. the environmental mount and hardware must be inspected at least once a year. This product should not be exposed to high winds. A qualified installer or inspector must check for signs of rust, loose fasteners, bent metal, etc. If evidence of excessive wear, deterioration or any unsafe condition is observed, this product must be taken out of service immediately. Direct all inquiries to customer care if you have any questions.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Never exceed the Maximum Load Capacity. See page one.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. Use of an "edge to edge" stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.
- This product was designed to be installed on the following wall construction only;

WALL CONSTRUCTION	HARDWARE REQUIRED
• Wood Stud	Included
• Wood Beam	Included
• Solid Concrete	Included
• Cinder Block	Included
• Metal Stud	Contact Qualified Professional
• Brick	Contact Qualified Professional
• Other or unsure?	Contact Qualified Professional

Tools Needed for Assembly

- stud finder ("edge to edge" stud finder is recommended)
- phillips screwdriver
- drill
- 5/16" (8mm) bit for concrete and cinder block wall
- 5/32" (4mm) bit for wood stud wall
- level
- 7/16" open end wrench












Table of Contents

Parts List.....	3, 4
Enclosure Wall installation.....	5
Enclosure Installation to ESA763PU Articulating Wall Mount.....	7
Enclosure Installation to EPT650 Tilt Wall Mount.....	13
Wireless Receiver Setup	16


Before you begin, make sure all parts shown are included with your product.

Parts List		HDS-OWRE-300	
Description	Qty.	Part #	
A wireless receiver enclosure, outdoor	1	180-1018	
B concrete anchor	2	590-0320	
C #14 x 2.5" wood screw	2	520-5033	
D cable tie .187 x 7.5 lg.	2	590-1168	
E cable tie .04 x 5.75 lg.	4	560-9711	
F push-in round plastic plug, 3/8"	4	590-9465	
G 1/4-20 x 1/2 socket head screw	6	500-2093	
H lock nut 1/4-20	6	530-5013	
I cable management sheath	1	590-9468	
J enclosure mounting bracket, small	2	120-T1195	
K enclosure mounting bracket, large	2	120-T1196	
L 4 mm allen wrench	1	560-9646	

 Parts may appear slightly different than illustrated.

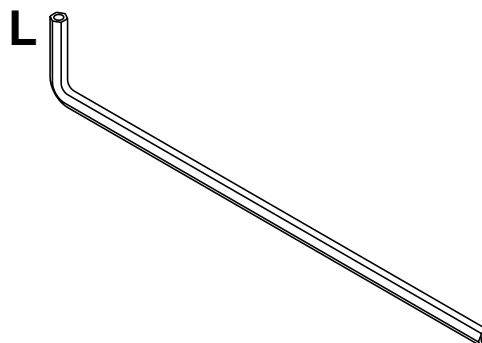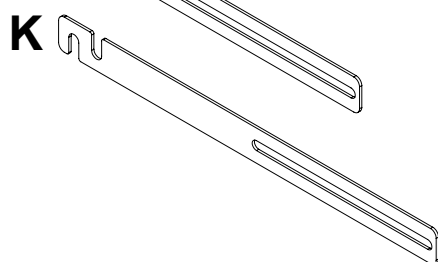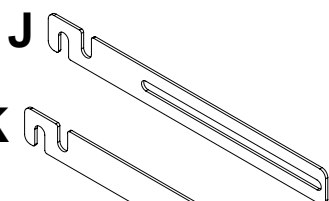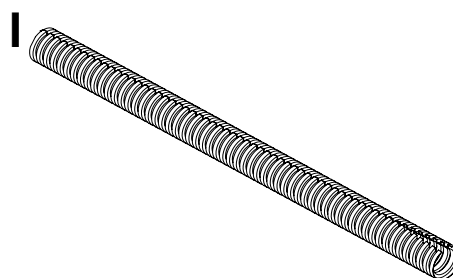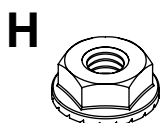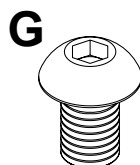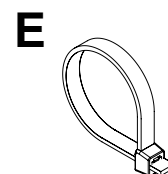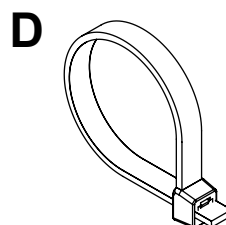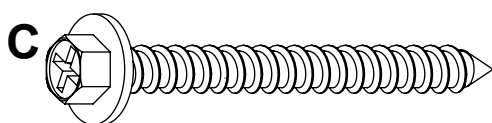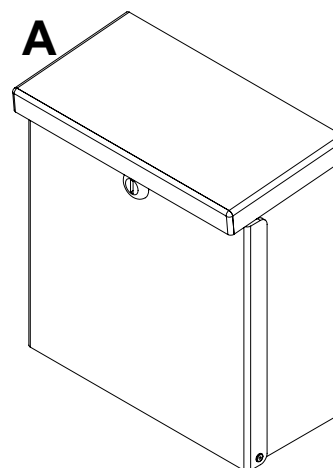


Adapter Bracket Fasteners

 


M4 x 12 mm (6)
(510-D1079)



 
M4 x 25 mm (4)
(510-D1082)




M5 x 12 mm (4)
(520-D1064)

 


M5 x 25 mm (4)
(520-D1122)

 


M6 x 12 mm (4)
(520-D1050)

 


M6 x 20 mm (4)
(520-D1554)

 


M6 x 25 mm (4)
(520-D1211)

 


M6 x 30 mm (4)
(520-D1067)

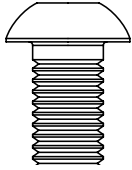

M8 x 15 mm (6)
(520-D1068)

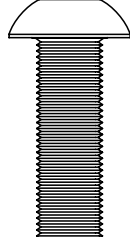


M8 x 25 mm (4)
(520-D1101)

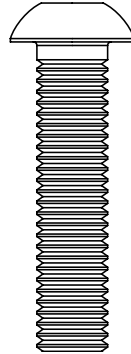


M8 x 40 mm (4)
(520-D1152)



I.D. .22" (4)
(540-1057)

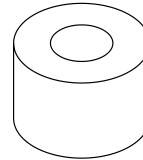

I.D. .34" (4)
(540-1059)

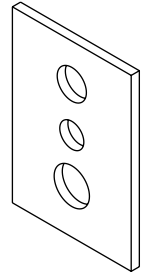

multi-washer (6)
(580-D1036)

Enclosure Wall Installation

- 1 Open the wireless receiver enclosure (**A**) and remove the sub panel assembly as shown in fig. 1.1. Choose two holes for securing the wireless receiver enclosure (**A**). Press in plastic plug (**F**) into the four remaining holes shown in figure 1.2.

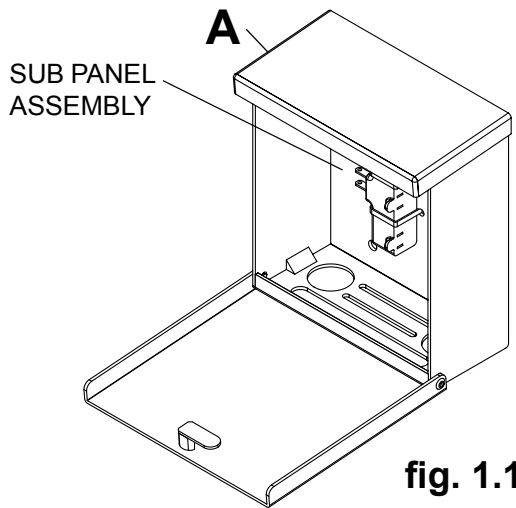


fig. 1.1

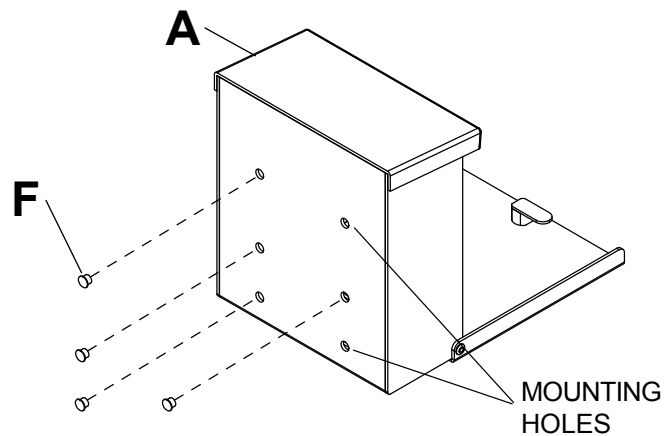


fig. 1.2


⚠ WARNING

- Installer must verify that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Tighten wood screws so that the enclosure is firmly attached, but do not overtighten. Overtightening can damage the screws, greatly reducing their holding power.
- Never tighten in excess of 80 in. • lb (9 N.M.).
- Make sure that mounting screws are anchored into the center of the stud. The use of an "edge to edge" stud finder is highly recommended.
- Hardware provided is for attachment of mount through standard thickness drywall or plaster into wood studs. Installers are responsible to provide hardware for other types of mounting situations.

Installation to Single Wood Stud Wall

- 2 Use a stud finder to locate the edges of the stud. Use of an edge-to-edge stud finder is highly recommended. Based on its edges, draw a vertical line down the stud's center. Place enclosure on wall as a template, making sure that two vertical mounting holes are over the stud centerline. Level the enclosure, and mark the center of the two holes. Drill two 5/32" (4mm) dia. holes 2-1/2" (64mm) deep. Make sure that the enclosure is level, secure it using two #14 x 2-1/2" wood screws (**C**) as shown.

Skip to step 10.

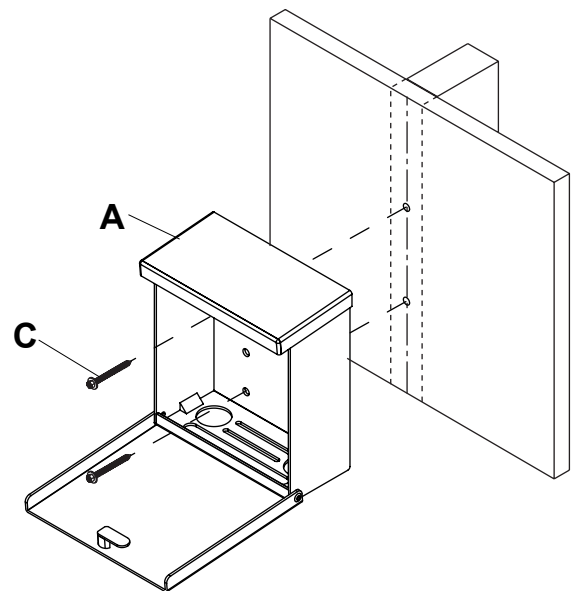

Enclosure Wall Installation to Solid Concrete or Cinder Block



⚠ WARNING

- Verify that you have a minimum of 1-3/8" (35mm) of actual concrete thickness in the hole to be used for the concrete anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1" (25mm) minimum from the side of the block. Cinder block must meet ASTM C-90 specifications. It is suggested that a standard electric drill on slow setting is used to drill the hole instead of a hammer drill to avoid breaking out the back of the hole when entering a void or cavity.
- Concrete must be 2000 psi density minimum. Lighter density concrete may not hold concrete anchor.
- Make sure that the wall will safely support four times the combined load of the equipment and all attached hardware and components.


- 2** Make sure that the enclosure is level, use it as a template to mark two mounting holes. Drill two 5/16" (8mm) dia. holes to a minimum depth of 2-1/2" (64mm). Insert anchors (B) in holes flush with wall as shown (right). Place the enclosure over anchors and secure with two #14 x 2-1/2" screws (C). Level, then tighten all fasteners.

⚠ WARNING

- Tighten screws so that wall plate is firmly attached, but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.
- Never tighten in excess of 80 in. • lb (9 N.M.).
- Always attach concrete expansion anchors directly to load-bearing concrete.
- Never attach concrete expansion anchors to concrete covered with plaster, drywall, or other finishing material. If mounting to concrete surfaces covered with a finishing surface is unavoidable, the finishing surface must be counter bored as shown below. Be sure concrete anchors do not pull away from concrete when tightening screws. If plaster/drywall is thicker than 5/8" (16mm), custom fasteners must be supplied by installer.

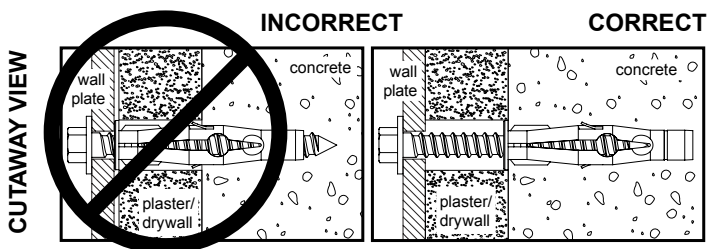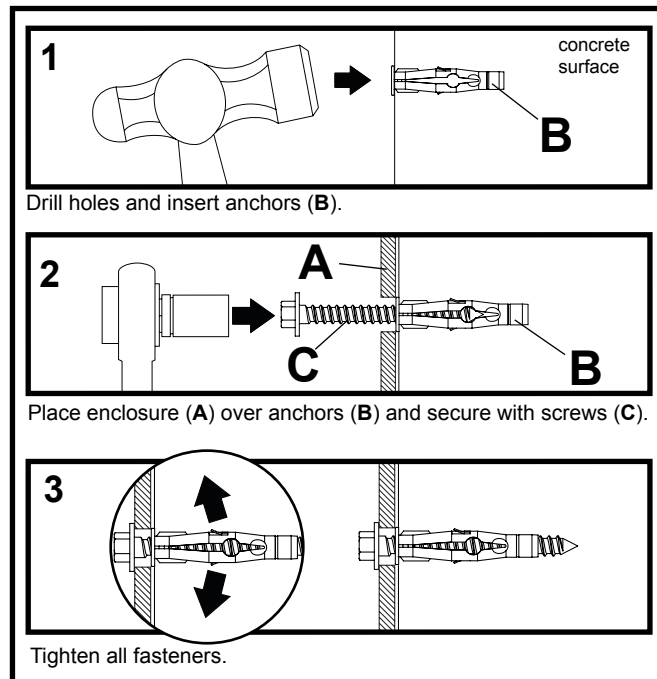

Skip to step 10.

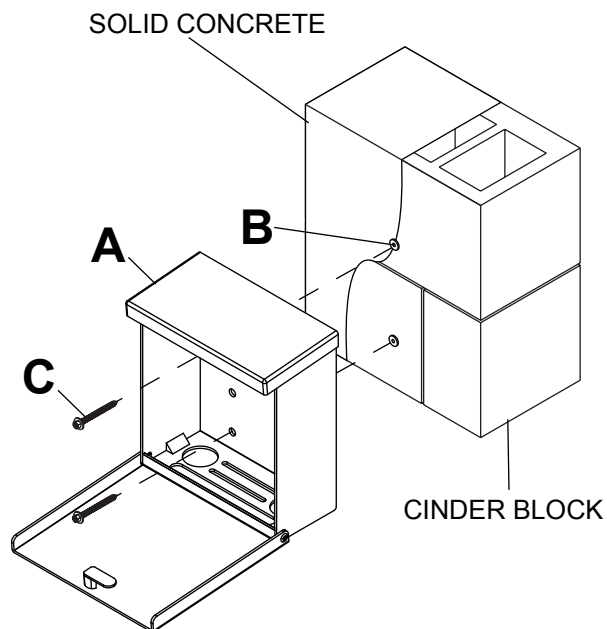

Enclosure Installation to ESA763PU Articulating Wall Mount

3

NOTE: If display has a VESA 600 horizontal mounting pattern, skip to step 5 on page 10.

3-1

Open the wireless receiver enclosure (**A**) and remove the sub panel assembly as shown in fig. 3.1. Loosely attach the small enclosure mounting brackets (**J**) to the wireless receiver enclosure (**A**) with two 1/4-20 x 1/2 socket head screws (**G**) and two 1/4-20 nuts (**H**) as shown in fig. 3.2. **NOTE:** The enclosure mounting bracket can be installed with the inside notch facing downward if additional side-to-side adjustment is needed. Position and tighten the two 1/4-20 x 1/2 socket head screws (**G**) using 4mm allen wrench (**L**).

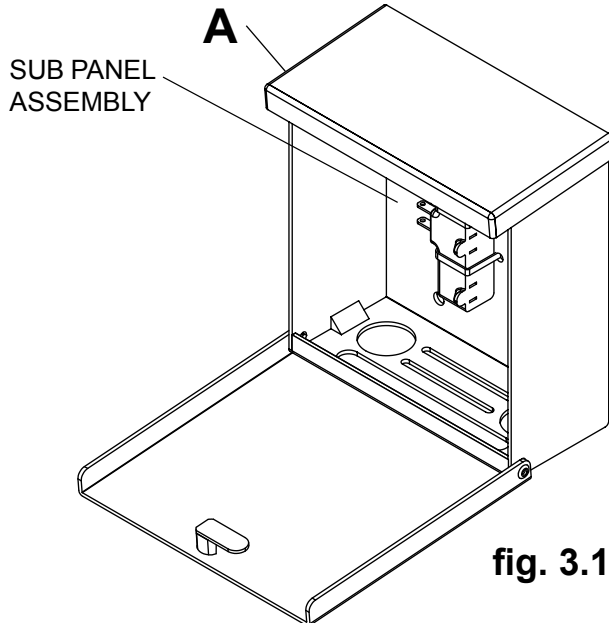


fig. 3.1

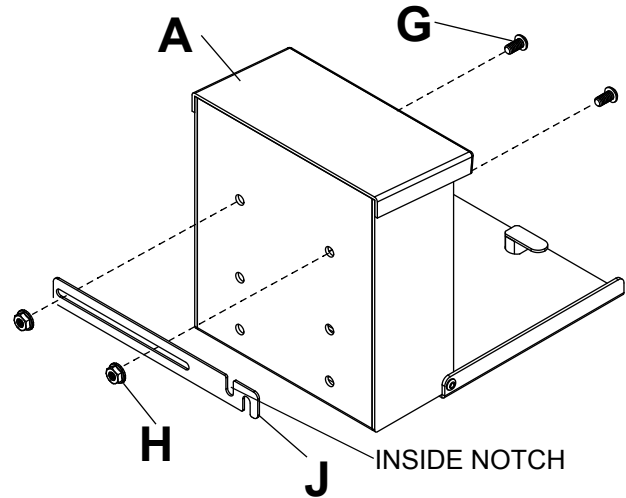


fig. 3.2

3-2

Attach the mounting bracket (**J**), open end of notch facing downward, to the left display bracket with one 1/4-20 x 1/2 socket head screw (**G**) and one 1/4-20 nut (**H**) as shown in fig. 3.3. Once in position, tighten the 1/4-20 x 1/2 socket head screw (**G**) using 4mm allen wrench (**L**).

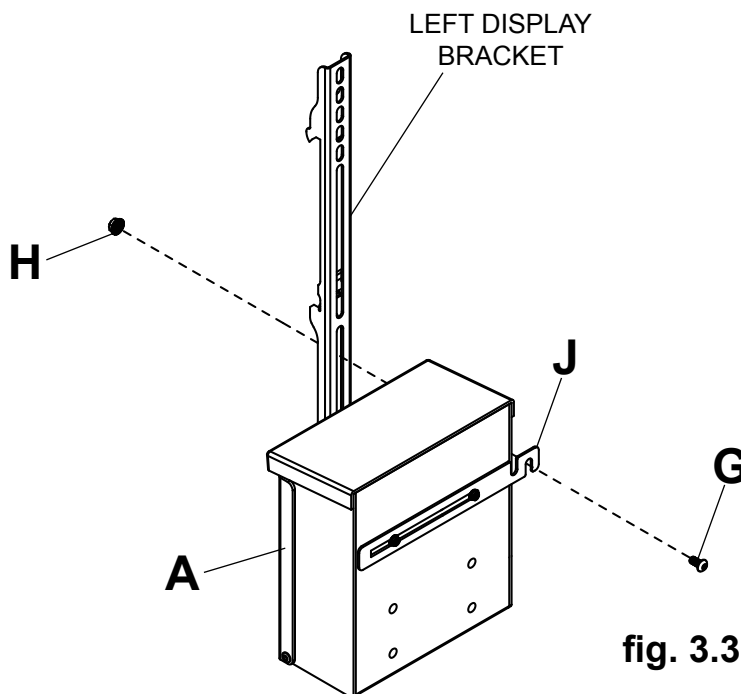


fig. 3.3

Installing Adapter Brackets to Display

⚠ WARNING

- Tighten screws so display brackets are firmly attached to display. Do not tighten with excessive force. Overtightening can cause stress damage to screws, greatly reducing their holding power and possibly causing screw heads to become detached. Tighten to 40 in. • lb (4.5 N.M.) maximum torque.
- If screws don't get three complete turns in the display inserts or if screws bottom out and bracket is still not tightly secured, damage may occur to display or product may fail.


4-1

Select the screws from the baffled fastener pack that best fit your display and secure to display following step 4-2. Verify that all holes are properly aligned, then tighten screws using a phillips screwdriver.

NOTE: Top and bottom mounting holes must be used for attaching display brackets. Middle holes should also be used where the fasteners and displays allow.

NOTE: Enclosure removed for clarity.

CENTER DISPLAY BRACKETS VERTICALLY AND HORIZONTALLY ON BACK OF DISPLAY

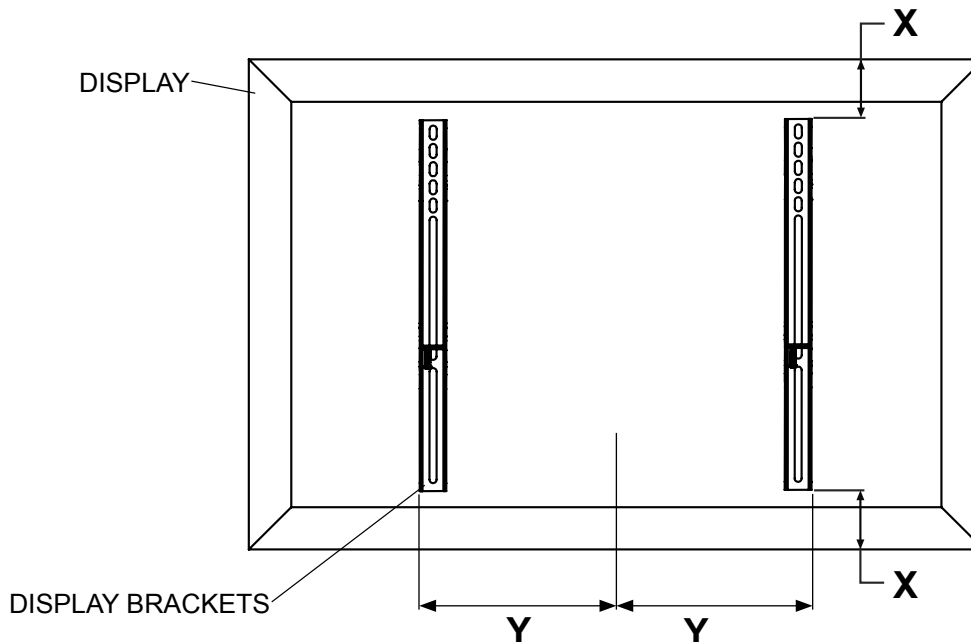


NOTE: "X" dimensions should be equal.
"Y" dimensions should be equal.

4-2


NOTE: Enclosure removed for clarity.

Begin with the longest length screw, hand thread screw through multi-washer, display brackets and spacer in that order into display as shown below. Screw must make at least three full turns into the mounting hole and fit snug into place. Do not over tighten. If screw cannot make three full turns into the display, select a shorter length screw from the baffled fastener pack. Repeat for remaining mounting holes, level display brackets and tighten screws.

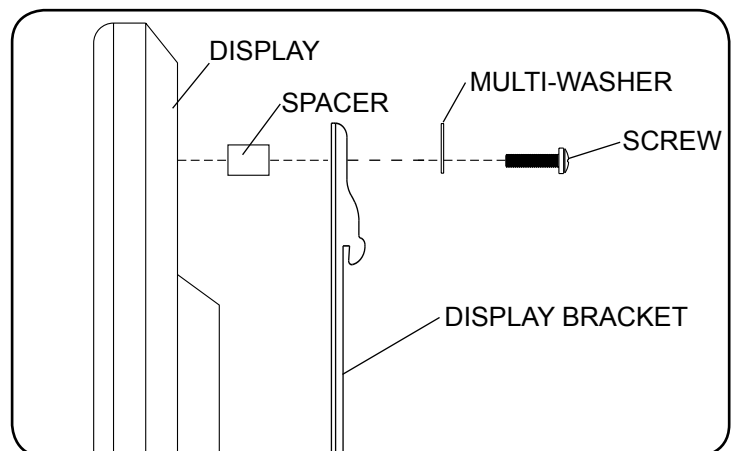

Installing Adapter Brackets to Display

- 4-3** Hook the top of the display brackets onto wall plate provided with ESA763PU, swing and align the bottom of the display brackets with the wall plate and secure each screw within both display brackets using a 4mm allen wrench (L).

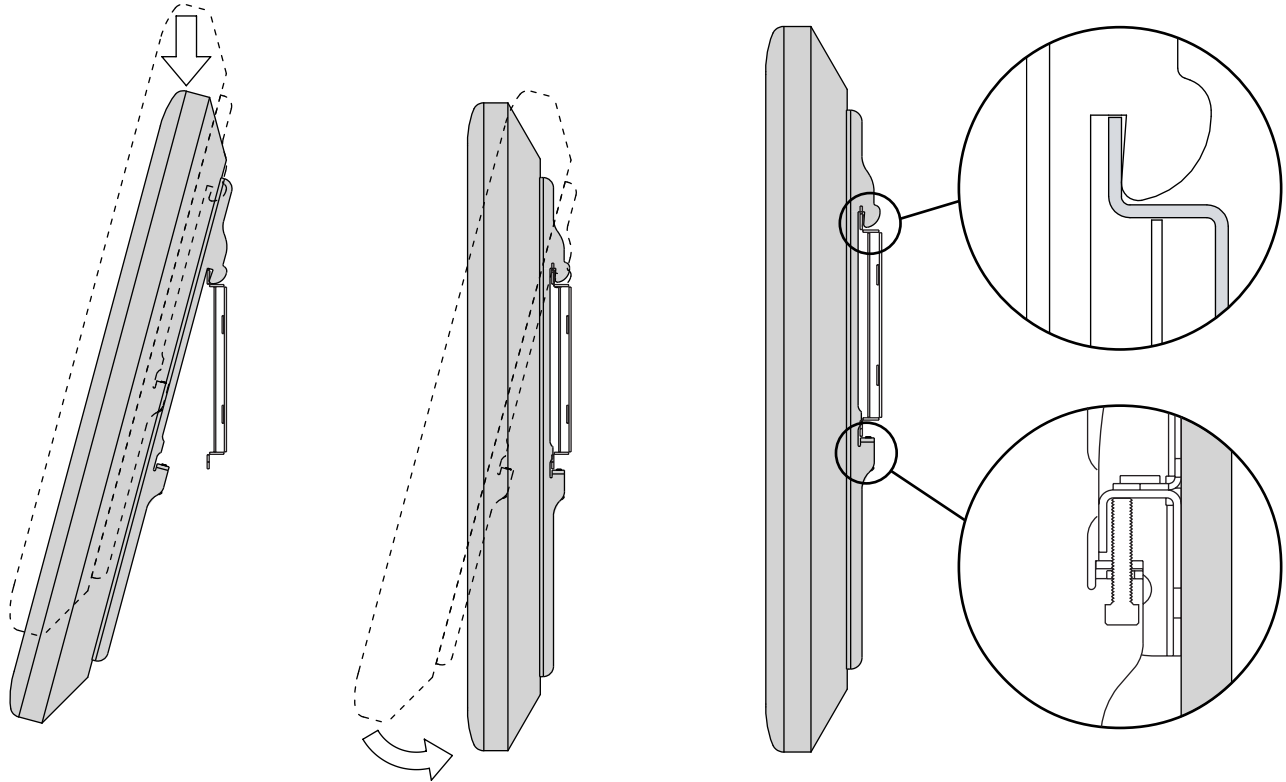

- 4-4** Make sure the top of the enclosure box is flush with the bottom edge of the wall plate. Also make sure the side of the enclosure box is flush with the side of the display bracket. Tighten down all screws and nuts to prevent the enclosure from swinging. See fig. 4.1.

NOTE: Display removed for clarity

Skip to step 10.

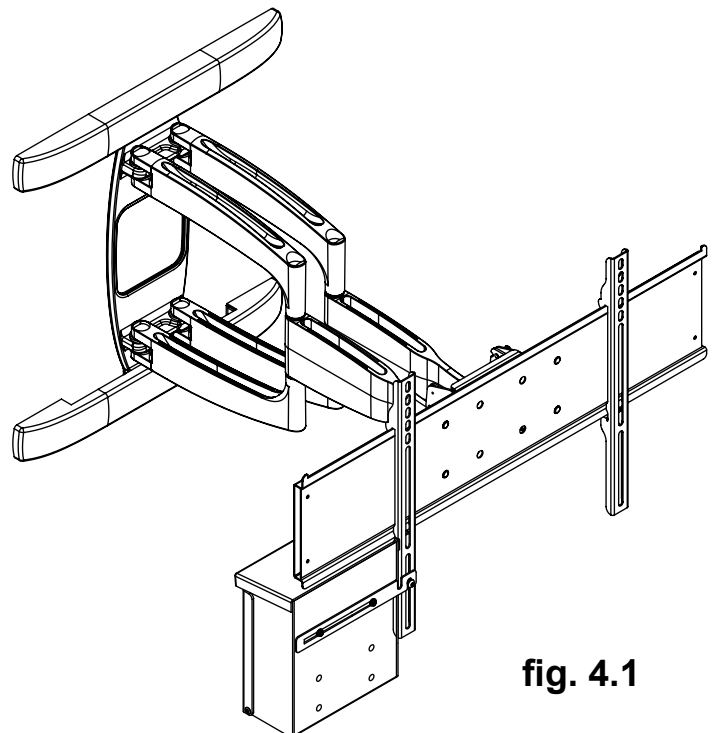


fig. 4.1

Enclosure Installation to ESA763PU Articulating Wall Mount

VESA 600 Mounting Pattern

- 5** Open the wireless receiver enclosure (A) and remove the sub panel assembly as shown in fig. 5.1. Loosely attach two enclosure mounting brackets (J) to the wireless receiver enclosure (A) with two 1/4-20 x 1/2 socket head screws (G) and two 1/4-20 nuts (H) as shown in fig. 5.2. **NOTE:** The enclosure mounting bracket can be installed with the inside notch facing downward if additional side-to-side adjustment is needed. Position and tighten the four 1/4-20 x 1/2 socket head screws (G) using 4mm allen wrench (L). Press in two plastic plugs (F) into holes shown in figure 5.2.

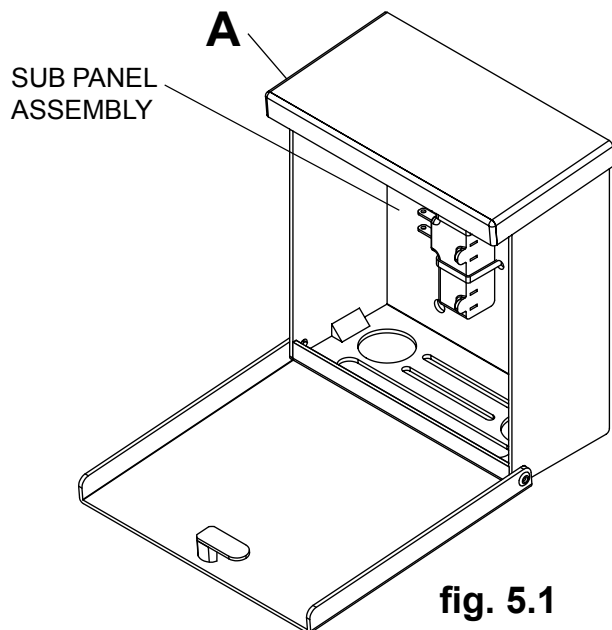


fig. 5.1

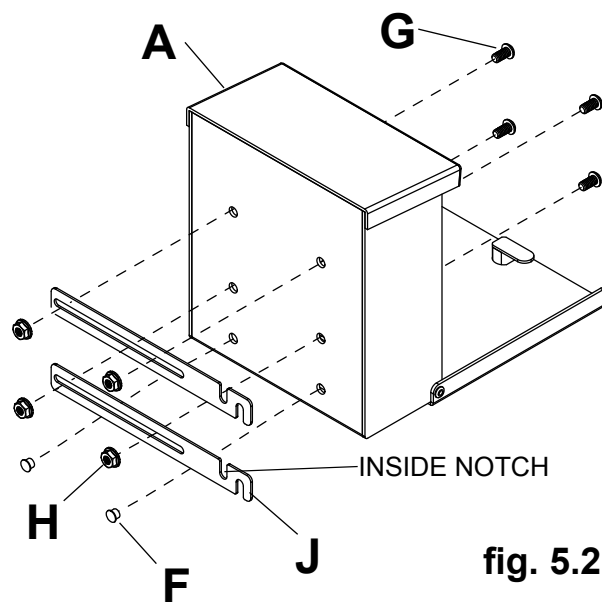


fig. 5.2

- 5-1** Attach two mounting brackets (J), open end of notch facing downward, to the left display bracket with two 1/4-20 x 1/2 socket head screws (G) and two 1/4-20 nuts (H) as shown in fig. 5.3. Once in position, tighten the 1/4-20 x 1/2 socket head screws (G) using 4mm allen wrench (L).

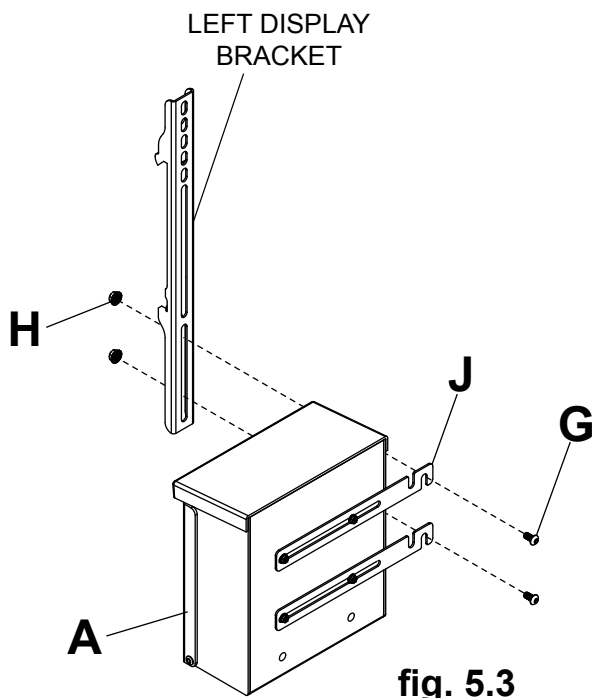


fig. 5.3

Installing Adapter Brackets to Display

⚠ WARNING


- Tighten screws so display brackets are firmly attached to display. Do not tighten with excessive force. Overtightening can cause stress damage to screws, greatly reducing their holding power and possibly causing screw heads to become detached. Tighten to 40 in. • lb (4.5 N.M.) maximum torque.
- If screws don't get three complete turns in the display inserts or if screws bottom out and bracket is still not tightly secured, damage may occur to display or product may fail.

6-1 Select the screws from the baffled fastener pack that best fit your display and secure to display following step 6-2. Verify that all holes are properly aligned, then tighten screws using a phillips screwdriver.

NOTE: Top and bottom mounting holes must be used for attaching display brackets. Middle holes should also be used where the fasteners and displays allow.

NOTE: Enclosure removed for clarity.


CENTER DISPLAY BRACKETS VERTICALLY AND HORIZONTALLY ON BACK OF DISPLAY

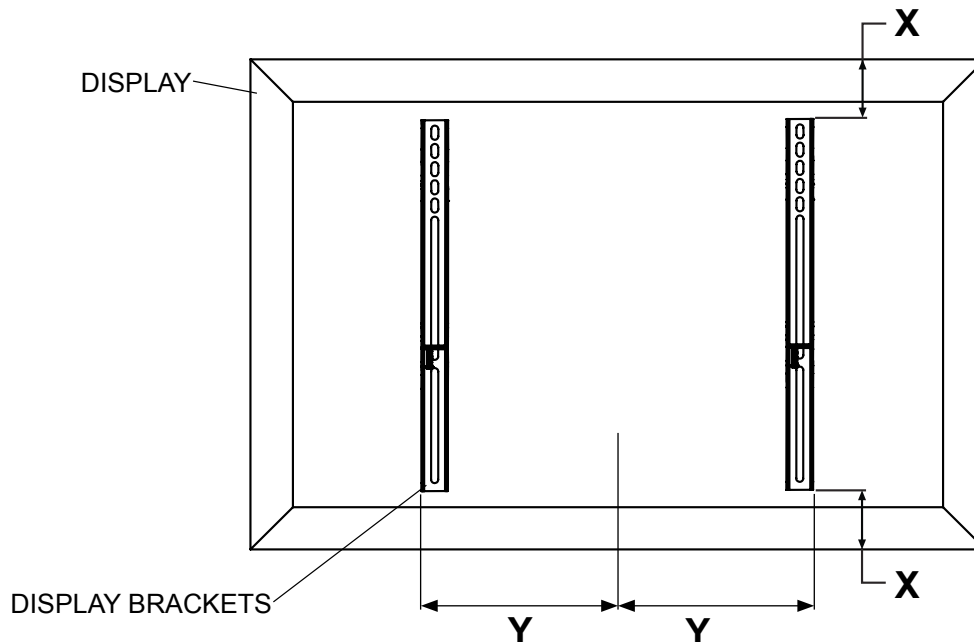

NOTE: "X" dimensions should be equal.
"Y" dimensions should be equal.

6-2 **NOTE:** Enclosure removed for clarity.


Begin with the longest length screw, hand thread screw through multi-washer, display brackets and spacer in that order into display as shown below. Screw must make at least three full turns into the mounting hole and fit snug into place. Do not over tighten. If screw cannot make three full turns into the display, select a shorter length screw from the baffled fastener pack. Repeat for remaining mounting holes, level display brackets and tighten screws.

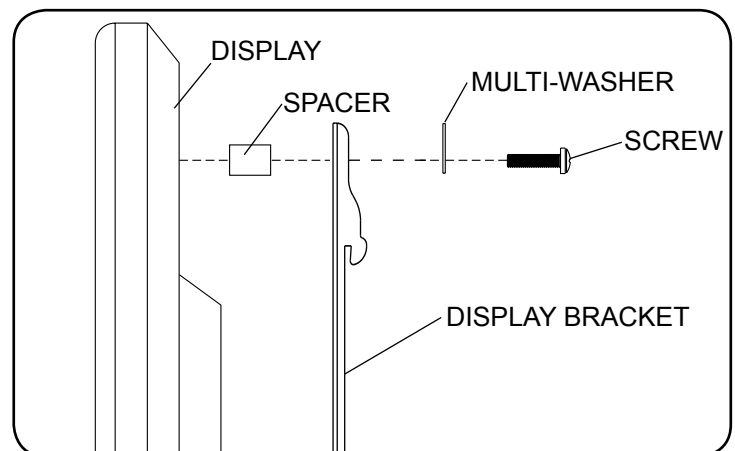

Installing Adapter Brackets to Display



- 6-3** Hook the top of the display brackets onto wall plate provided with ESA763PU, swing and align the bottom of the display brackets with the wall plate and secure each screw within both display brackets using a 4mm allen wrench (L).

Skip to step 10.

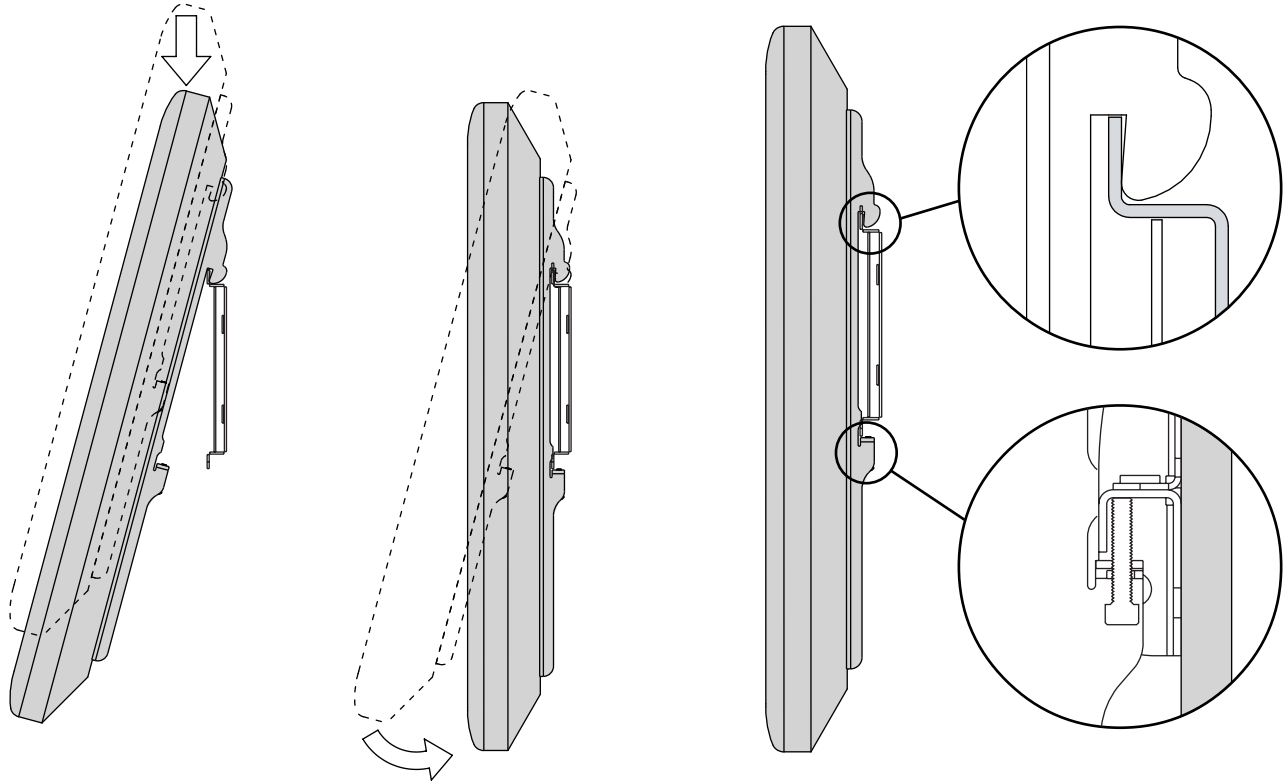


Enclosure Installation to EPT650 Tilt Wall Mount

- 7** Open the wireless receiver enclosure (**A**) and remove the sub panel assembly as shown in fig. 7.1. Loosely attach the small enclosure mounting brackets (**J**) to the wireless receiver enclosure (**A**) with two 1/4-20 x 1/2 socket head screws (**G**) and two 1/4-20 nuts (**H**) as shown in fig. 7.2. **NOTE:** The enclosure mounting bracket can be installed with the inside notch facing downward if additional side-to-side adjustment is needed. Position and tighten the four 1/4-20 x 1/2 socket head screws (**G**) using 4mm allen wrench (**L**). Press in two plastic plugs (**F**) into holes shown in figure 7.2.

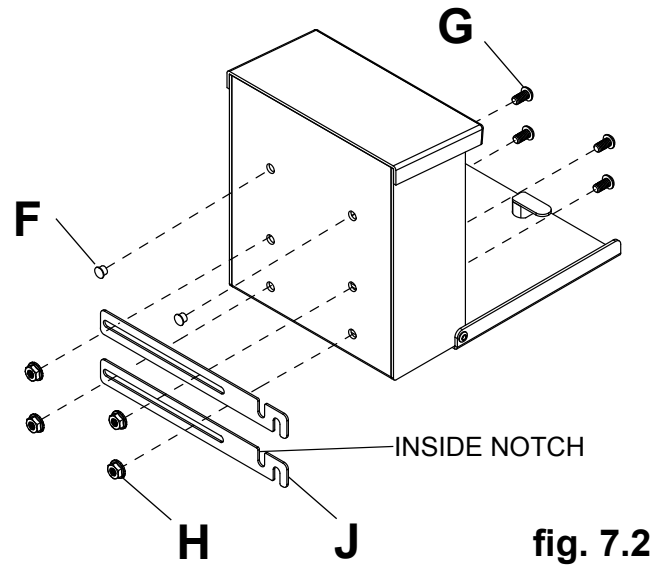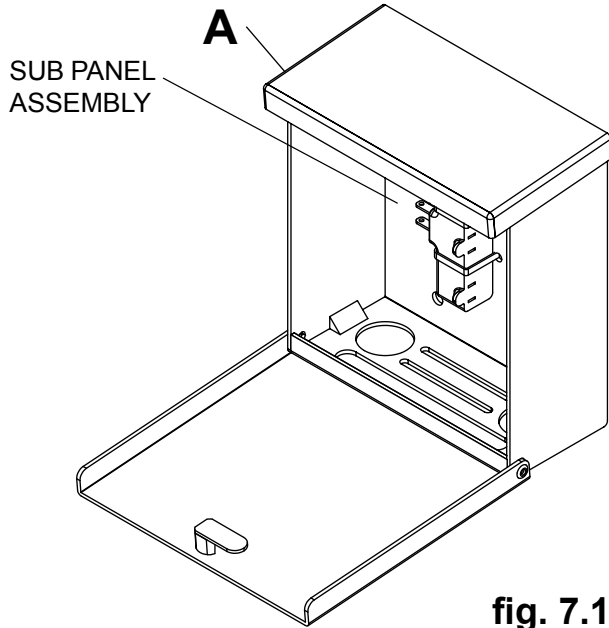

- 8** Attach the mounting brackets (**J**), open end of notch facing downward, to the left tilt bracket with two 1/4-20 x 1/2 socket head screws (**G**) and two 1/4-20 nuts (**H**) as shown in fig. 8.1. Adjust the position of the enclosure (**A**) to your desired location and tighten the four 1/4-20 x 1/2 socket head screws (**G**) using 4mm allen wrench (**L**).

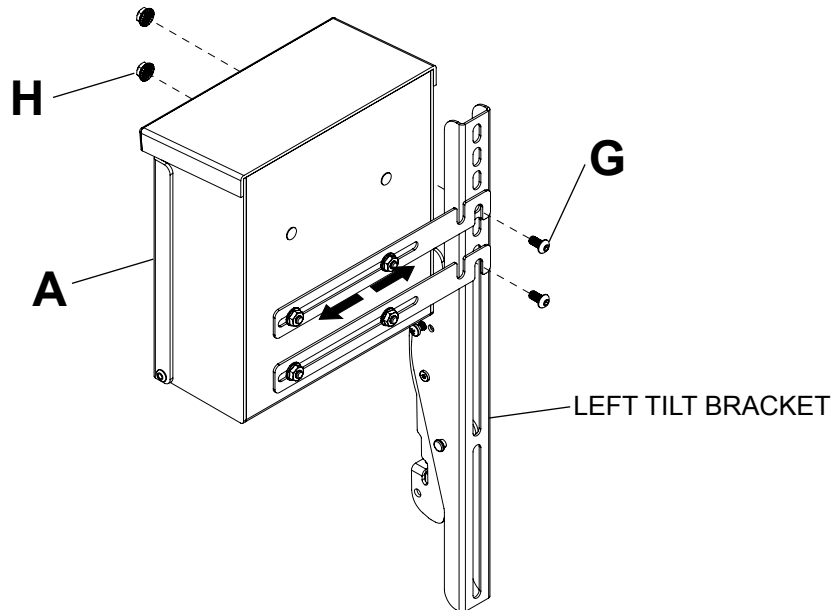

Installing Tilt Brackets


⚠ WARNING

- Tighten screws so adapter brackets are firmly attached. Do not tighten with excessive force. Overtightening can cause stress damage to screws, greatly reducing their holding power and possibly causing screw heads to become detached. Tighten to 40 in. • lb (4.5 N.M.) maximum torque.
- If screws don't get three complete turns in the display inserts or if screws bottom out and bracket is still not tightly secured, damage may occur to display or product may fail.

9 To prevent scratching the display, set a cloth on a flat, level surface that will support the weight of the display. Place display face side down. If display has knobs on the back, remove them to allow the adapter brackets to be attached. Place adapter brackets on back of display, align to holes, and center on back of display as shown below. Attach the adapter brackets to the back of the display using the appropriate combination of screws, multi-washers, and spacers as shown in figure 9.1.


NOTE: Top and bottom mounting holes on display must be used for attaching brackets.

NOTE: Be sure to attach tilt brackets with tilt locking screws facing outward as shown below. Verify that all holes are properly aligned, and then tighten screws using a phillips screwdriver.

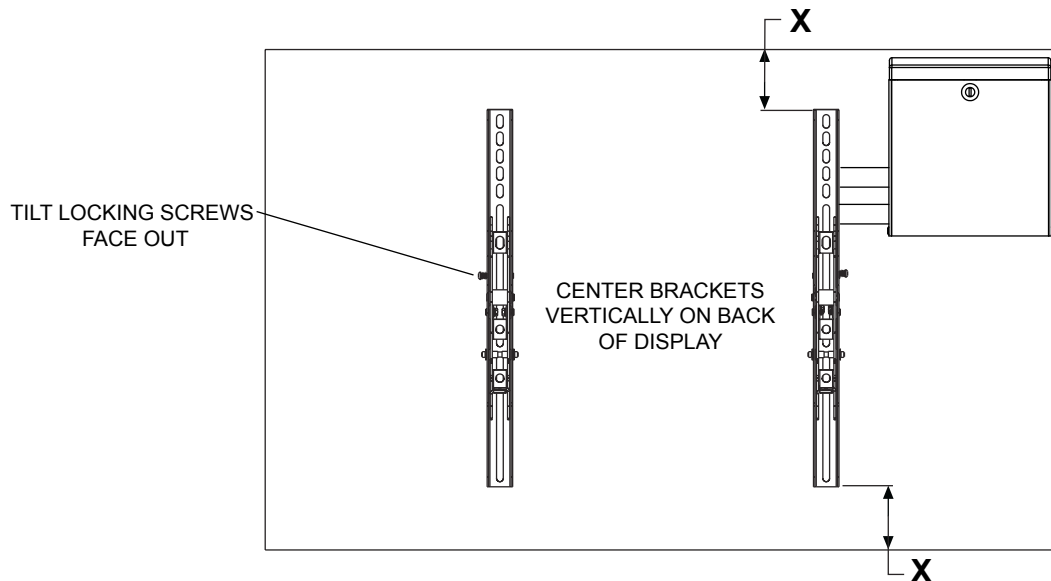

NOTE: "X" dimensions should be equal.


MULTI-WASHER

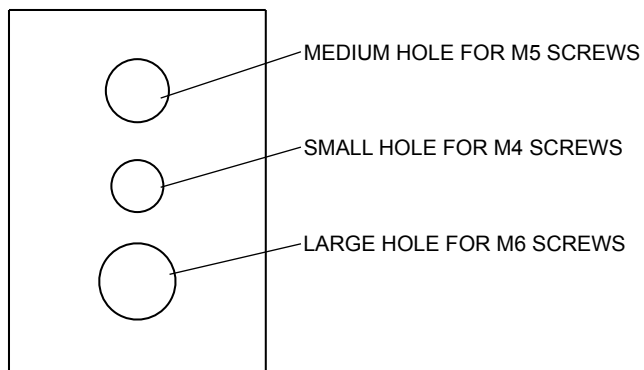

Notes:

- The number of fasteners used will vary, depending upon the type of display.
- Multi-washers and spacers may not be used, depending upon the type of display.
- Use the corresponding hole in the multi-washer that matches your screw size as shown.



- 9-1** Begin with longer length screw, hand thread through multi-washer, tilt bracket and spacer in that order into display as shown below. Screw must make at least three full turns into the mounting hole and fit snug into place. Do not over tighten. If screw cannot make three full turns into the display, select a longer length screw from the baffled fastener pack. Repeat for remaining mounting holes, level brackets and tighten screws.

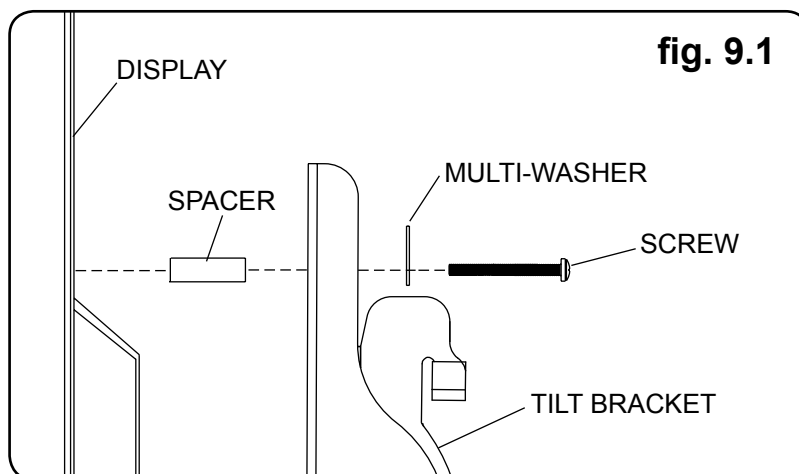


If you have any questions, please call Peerless customer care at **1-800-865-2112**.

Wireless Receiver Setup (Receiver Not Included)


- 10** Plug in the wireless receiver power adapter into the triple tap grounded outlet as shown. Insert an extension cord (not included) through the cord access hole in the bottom of the enclosure as shown. Plug extension cord into the triple tap grounded outlet. Insert the sub panel assembly into the wireless receiver enclosure (**A**) above the foam pads as shown. Push the sub panel assembly down and towards the rear of the until it makes contact with the back wall and the bottom of the enclosure.

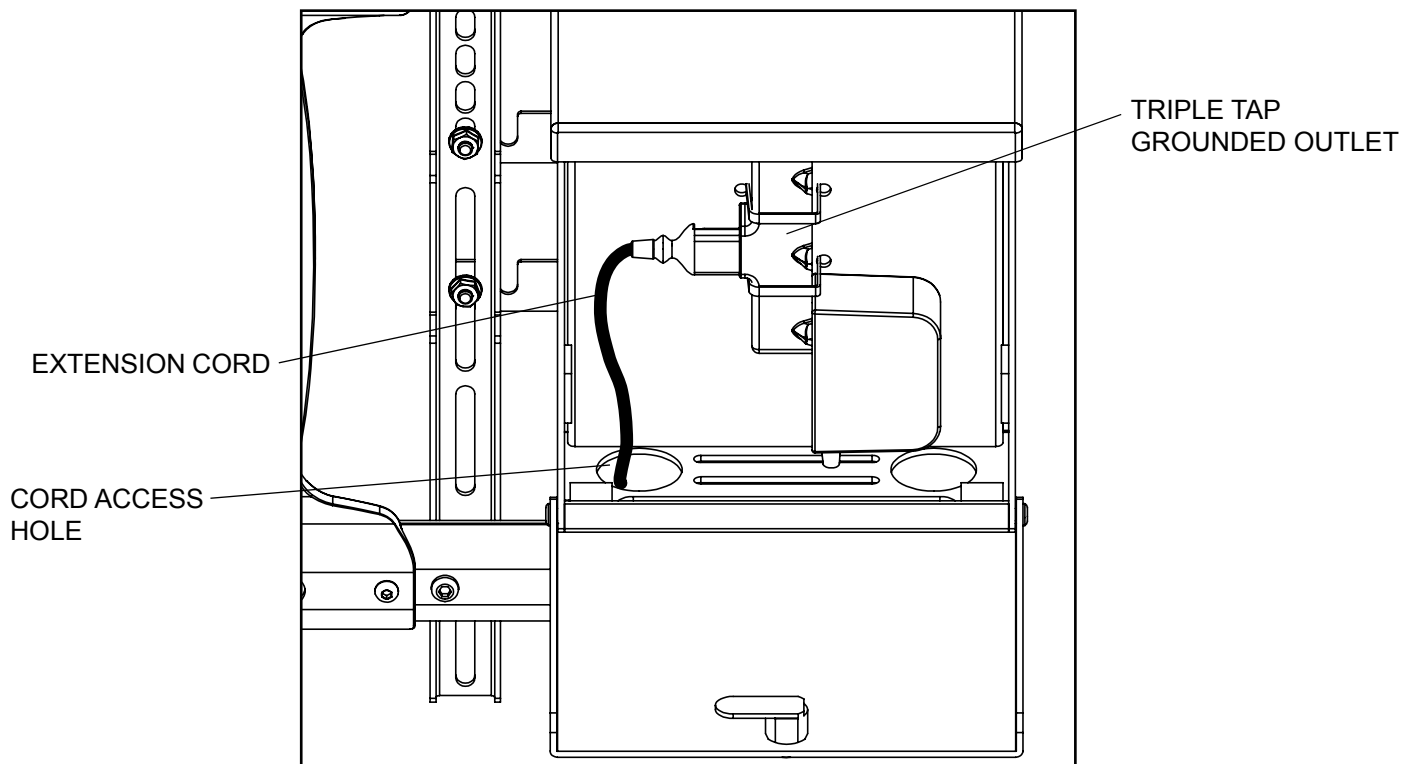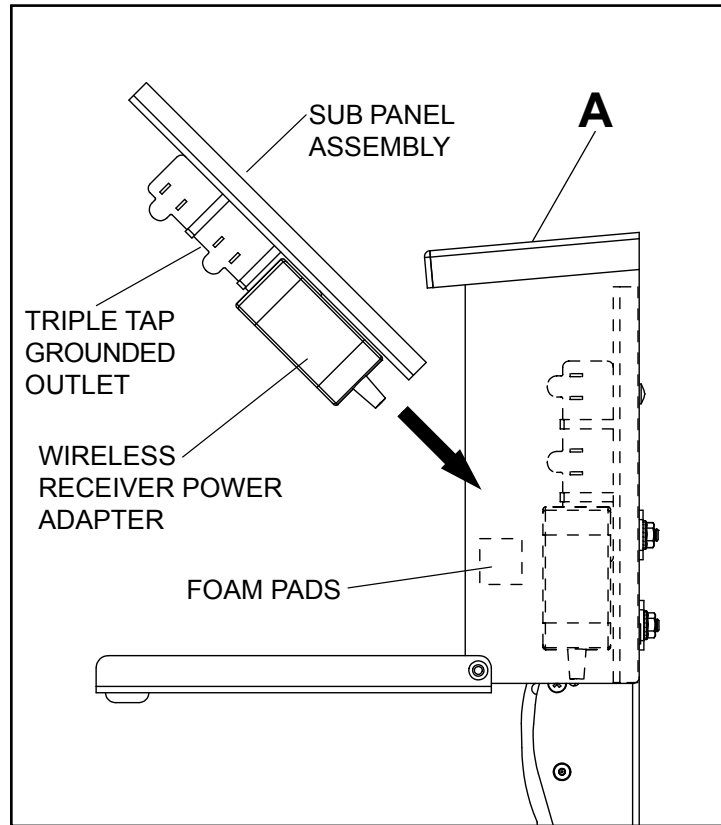


- 11** Insert the power cord from your display through the cord access hole in the bottom of the enclosure as shown. Plug the power cord into the triple tap grounded outlet. Coil up the excess cord and secure with a cable tie (**E**). Store excess cord inside enclosure.

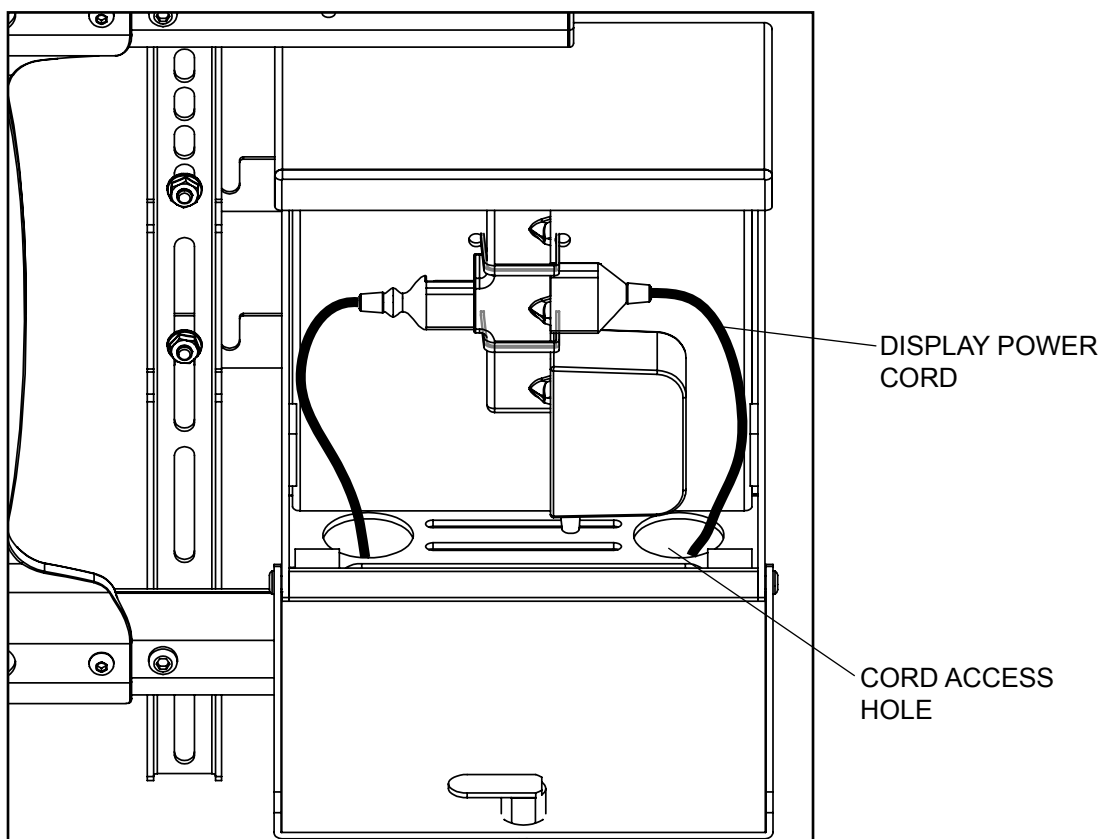


- 12** Insert your component cable(s) (HDMI shown) from your display through the cord access hole in the bottom of the enclosure as shown and plug into the wireless receiver. Coil up the excess cord and secure with a cable tie (**D**). Store excess cord inside enclosure.

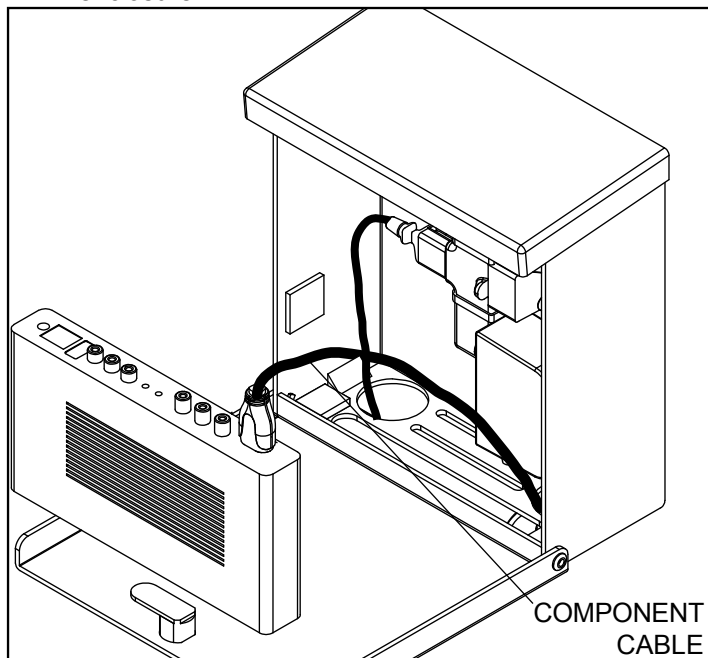

- 13** Plug the wireless receiver power cord into the wireless receiver. Position the wireless receiver into the enclosure as shown, then close the enclosure door. Door may be locked with key provided if desired.

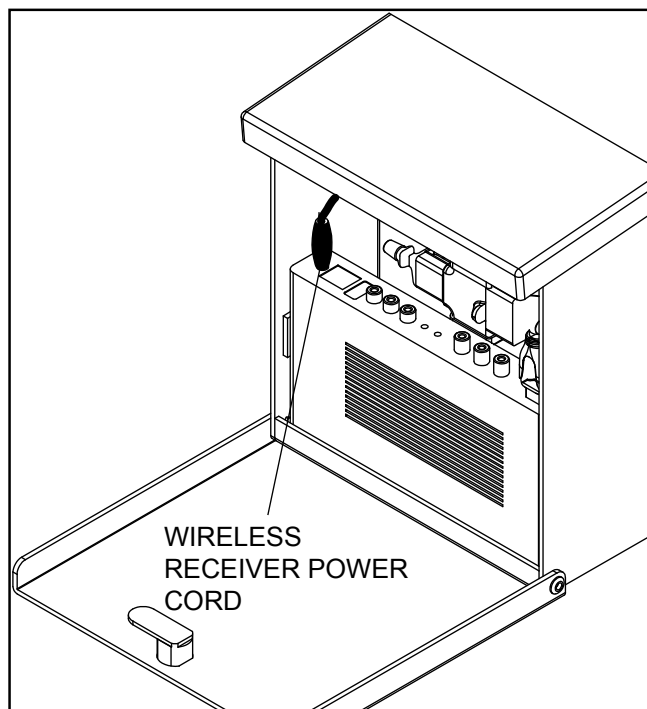

- 14** Place the component cord(s) inside the cable management sheath (**I**) by pushing the cables through the slit in the sheath. **NOTE:** The sheath may need to be trimmed to length before installing cords.

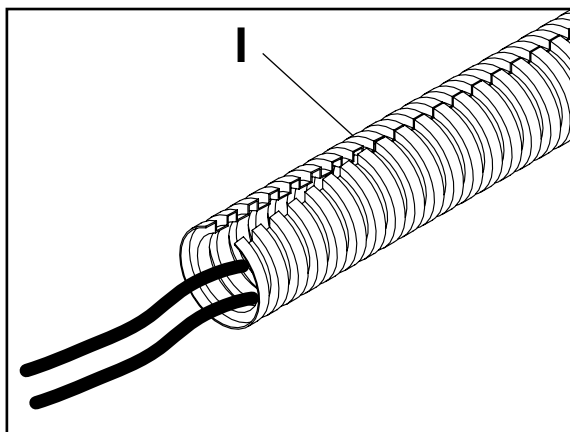

- 15** Plug extension cord into power source.
To complete the installation of your wireless system, please refer to the HD Flow™ User's Manual and the HD Flow™ Install Guide included.

LIMITED WARRANTY

Peerless Industries, Inc. ("Peerless-AV®") warrants to original end-users of Peerless-AV® products that Peerless-AV® products will be free from defects in material and workmanship, under normal use, for the periods listed below, from the date of purchase by the original end-user. At its option, Peerless-AV® will repair or replace with new or refurbished products or parts, or refund the purchase price of any Peerless-AV® product which fails to conform with this warranty.

In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless-AV®, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless-AV®'s instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third-party actions and force majeure. This warranty also does not cover corrosion or rust resulting from damaged, scratched or chipped paint or other surfaces.

In no event shall Peerless-AV® be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless-AV® product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, express or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless-AV® in connection with the sale of any Peerless-AV® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.

<u>Product</u>	<u>Warranty Period</u>
Mounts	5 years
Furniture	1 year
Cables	25 years
Cleaning Products	1 year
Electronic Products and components	1 year



www.peerless-av.com

© 2017 Peerless Industries, Inc.