



B-MIS38426


 
For Samsung Super Ultra Wide Curved Monitor

43": LC43J890DKNXZA

49": C49J890DKN

49": LC49HG90DMNXZA/C49HG90DMN




49": LC49RG90SSNXZA/C49RG90SSN

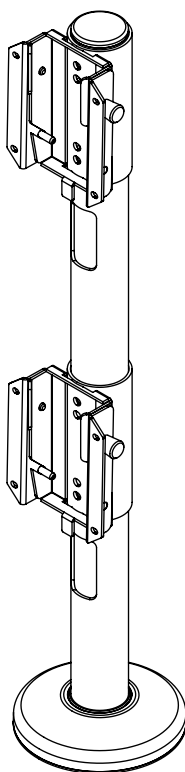









⚠ WARNING

ENG - Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.

ENG Symbols

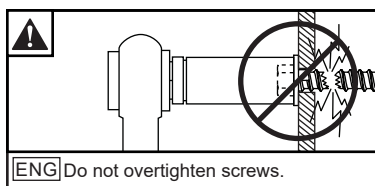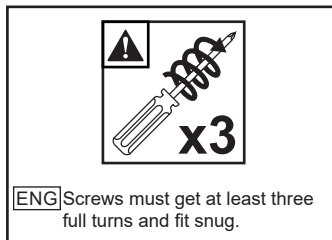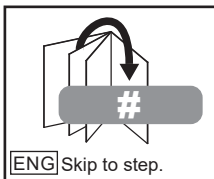


ENG Tools Needed for Assembly.

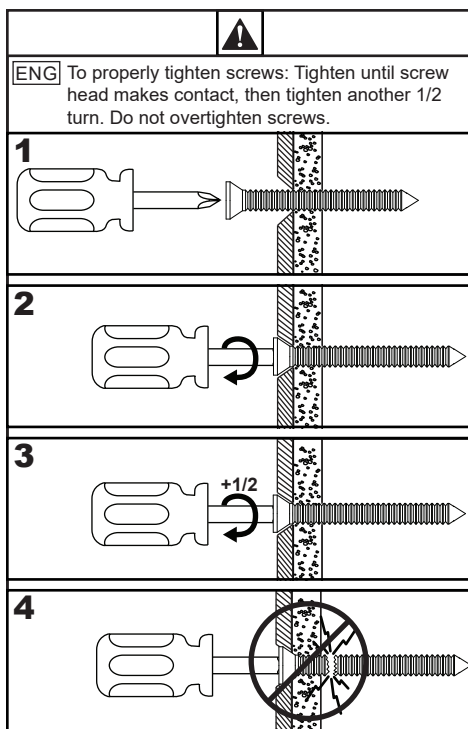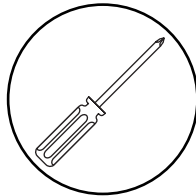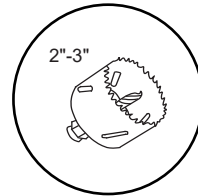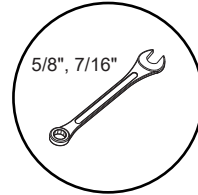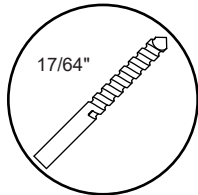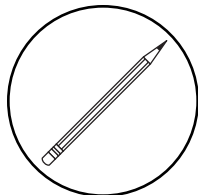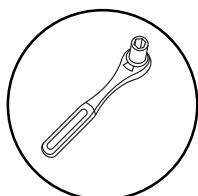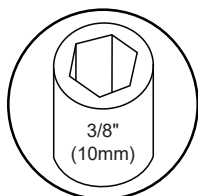


ENG Parts (Before beginning, make sure you have all parts shown below).

Parts List		
Description	Qty	Part #
A desktop swivel base	1	090-1821
B adaptor bracket	2	091-1211
C right adaptor bracket	2	091-1243
D left adaptor bracket	2	091-1244
E support tube	1	091-1221
F M6 x 6mm hex set screw	2	510-9150
G M4 x 8mm phillips screw	8	520-1237
H slope nut	3	530-0035
I 1/4-20 x 3/4" washer head screw	4	520-1321
J 1/4" x 1/2" x .068 split washer	4	540-9402
K 48" foam strip	1	570-1170
L 1/4-20 lock nut	4	530-1021
M fender washer	4	540-1008
N 1/4-20 x 3" threaded rod	4	520-2585
O base plate	1	090-1544
P thrust washer	1	590-1287
Q 1/4-20 x 1.5" threaded rod	4	520-2250
R 3mm allen wrench	1	560-0194
S 10-32 x 1/2" set screw	2	520-1614

 E (1)
support tube



A (1)
desktop swivel base

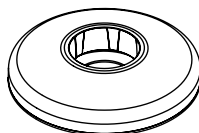


F (2)

M6 x 6mm hex set screw




G (8)

 M4 x 8mm




B (2)

adaptor bracket

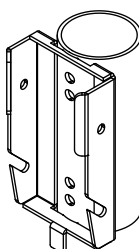


I (4)

 1/4-20 x 3/4"



L (4)

 1/4-20 lock nut




J (4)

1/4" x 1/2" x .068 split washer




H (3)

slope nut

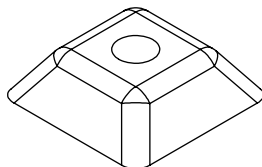

C (2)

 right adaptor bracket



D (2)

left adaptor bracket



 
K (1)

foam strip




R (1)

3mm allen wrench




M (4)

fender washer

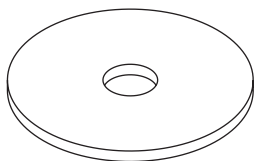


O (1)

base plate

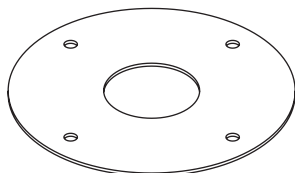

P (1)

thrust washer

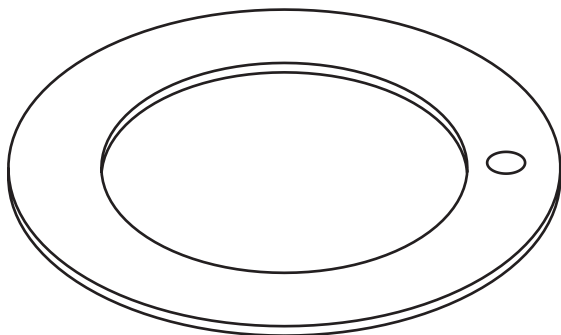

N (4)

1/4-20 x 3" threaded rod



Q (4)

1/4-20 x 1.5" threaded rod



S (2)

10 x 32mm x 1/2"
hex set screw






⚠ WARNING

ENG - Wooden mounting surface requires a minimum of 3/4" thickness to hold screen securely.

1-1



ENG Use base plate as a template to mark location of holes. Drill four holes in square formation, aligned to front of desk.

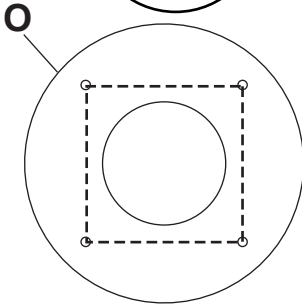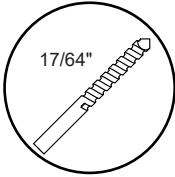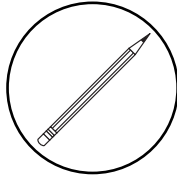

ENG Front of desk

1-2

ENG Drill 2" to 3" cord management hole in the center of the square formation.

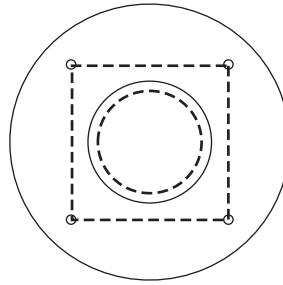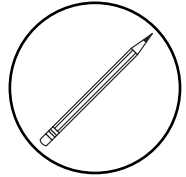


ENG Front of desk

2-1




N (4), Q (4)





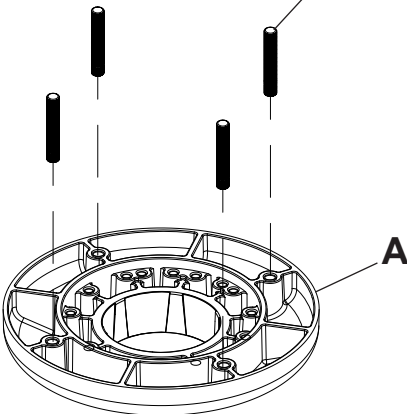


2-2

ENG Turn base upside down.

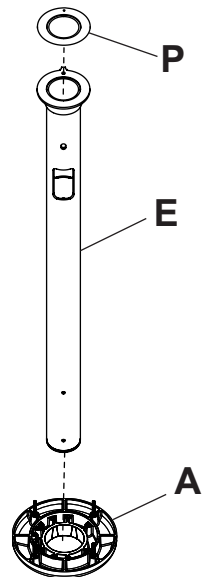

ENG Swivel restriction: refer to detail 1 through 4. Fasten two set screws where indicated below to the outside of desired angle in steel base.
Note: set screws must be bottomed out into base.

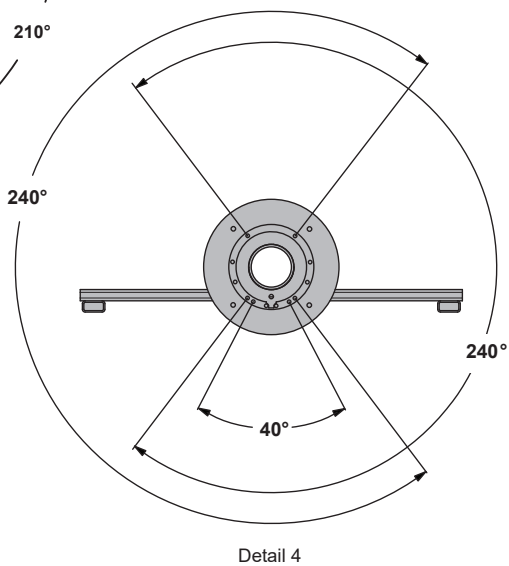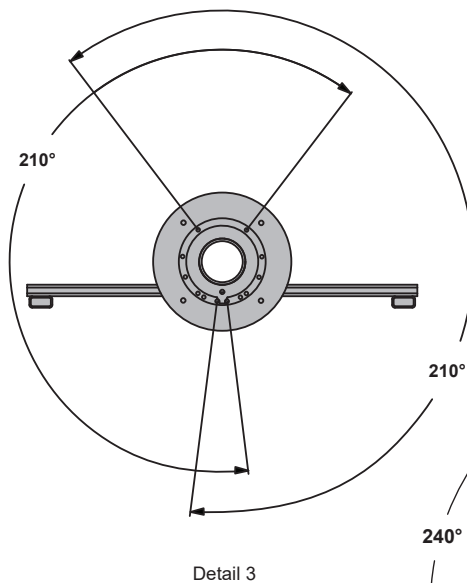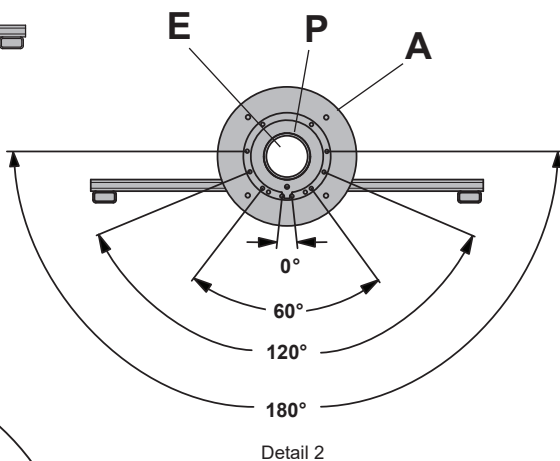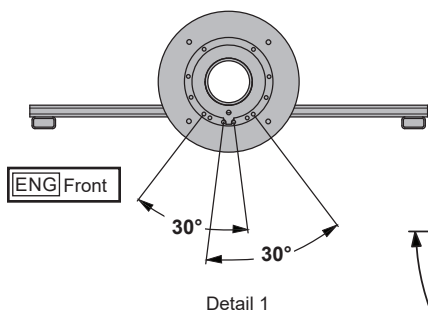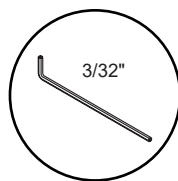


⚠ CAUTION

ENG - Installations to desktops that have a gap between two supporting boards are not acceptable mounting surfaces for the desktop swivel mount.


4-1

ENG Align plate with threaded rods.
Note: Washer must be centered.

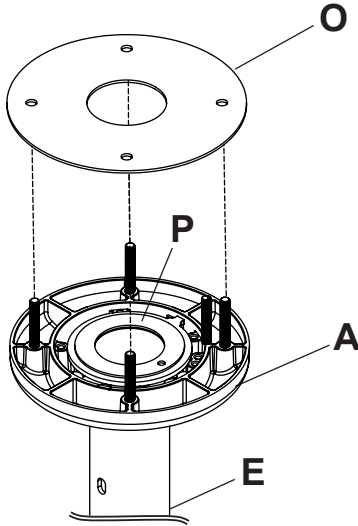


4-2

ENG Align base assembly with supporting surface and base pattern facing the front as shown. Tighten four fender washers with four lock nuts in the sequenced pattern at minimum flush with the bottom of the threaded rods.

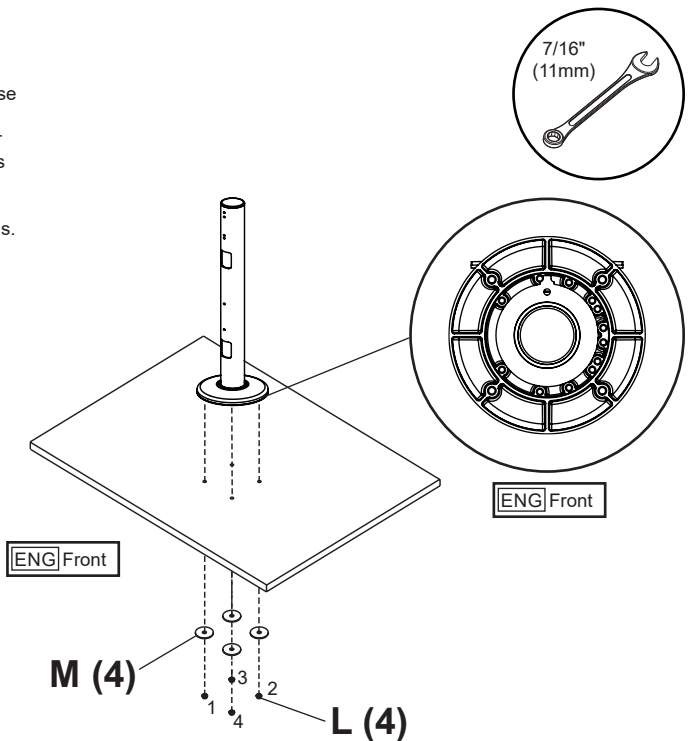


5-1

ENG Optional: for added security replace two of the washers and locknuts with slope nuts. Hand tighten slope nuts onto two of the threaded rods until snug against bottom of desk as shown.

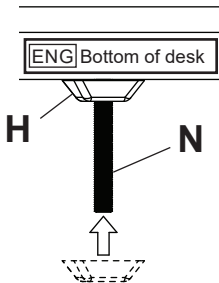


5-2

ENG Thread another slope nut upside-down, about two turns from first slope nut as shown. Avoid jamming both slope nuts together, doing so may make it difficult to remove slope nut used for tightening.

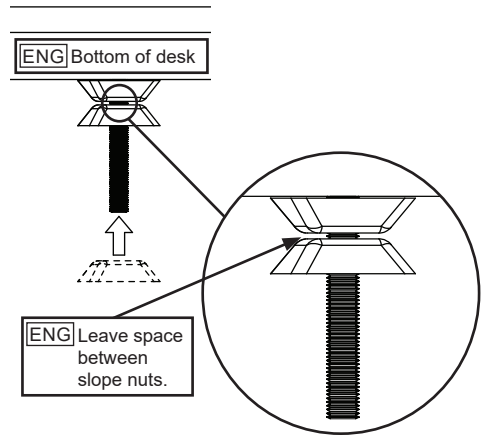


5-3

ENG Insert an open end wrench between both slope nuts and tighten as shown. After top slope nut is secure remove bottom slope nut as shown.

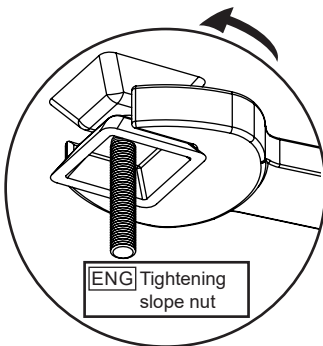

5-4

ENG After slope nut is secure, remove bottom slope nut as shown.

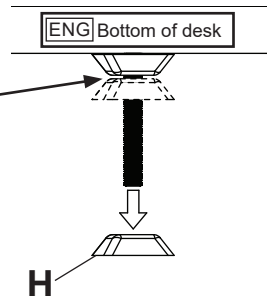

**6a-1**

49" (LC49HG90DMNXZA)

49" (C49HG90DMN)

49" (C49J890DKN)

49" (LC49RG90SSNXZA)


49" (C49RG90SSN)

**6b-1**

43" (LC43J890DKNXZA)


6a-1

ENG Top monitor

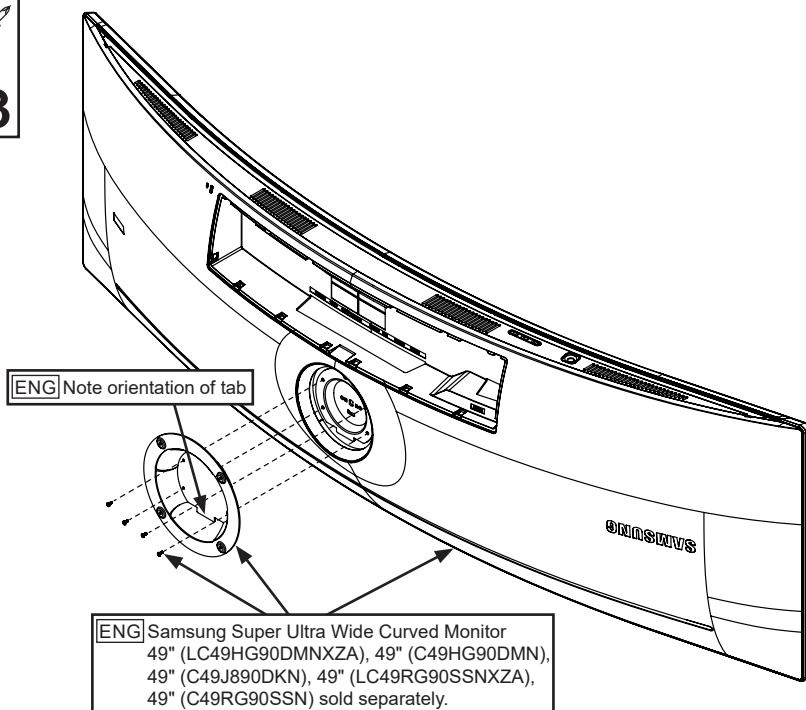



6a-2

ENG Bottom monitor

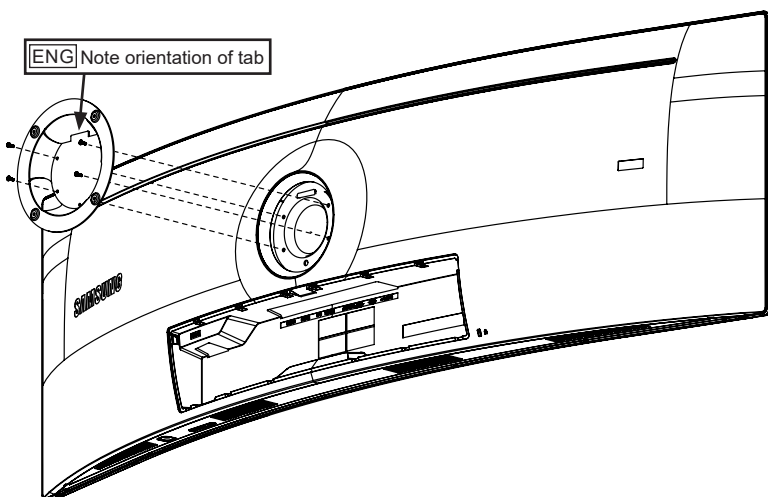



6a-3

ENG Top monitor

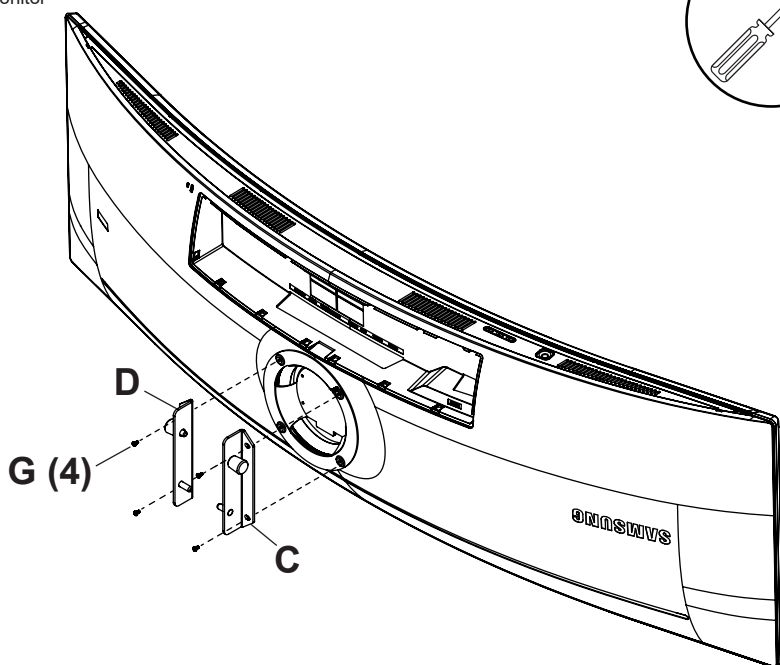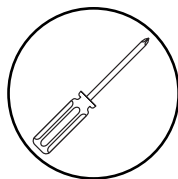


6a-4

ENG Bottom monitor

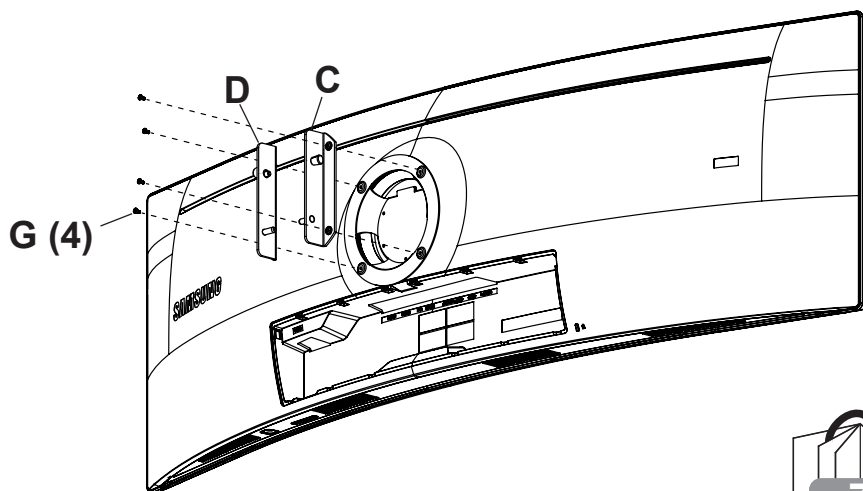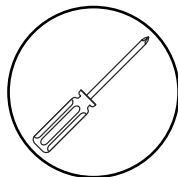


6b-1

ENG Top monitor

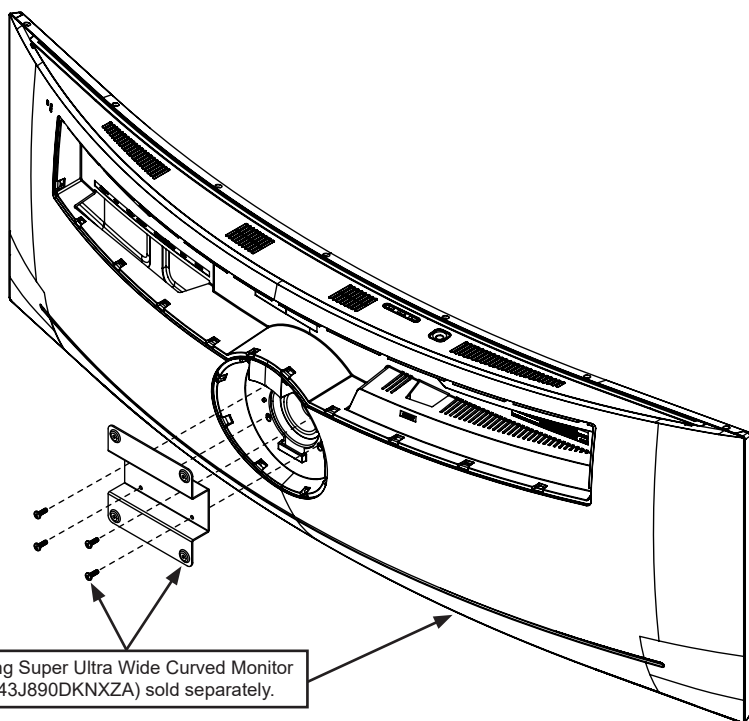


6b-2

ENG Bottom monitor

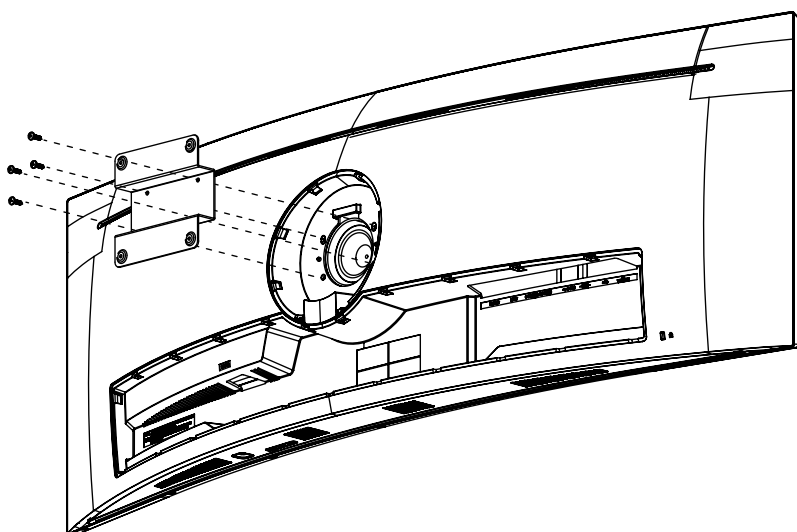


6b-3

ENG Top monitor

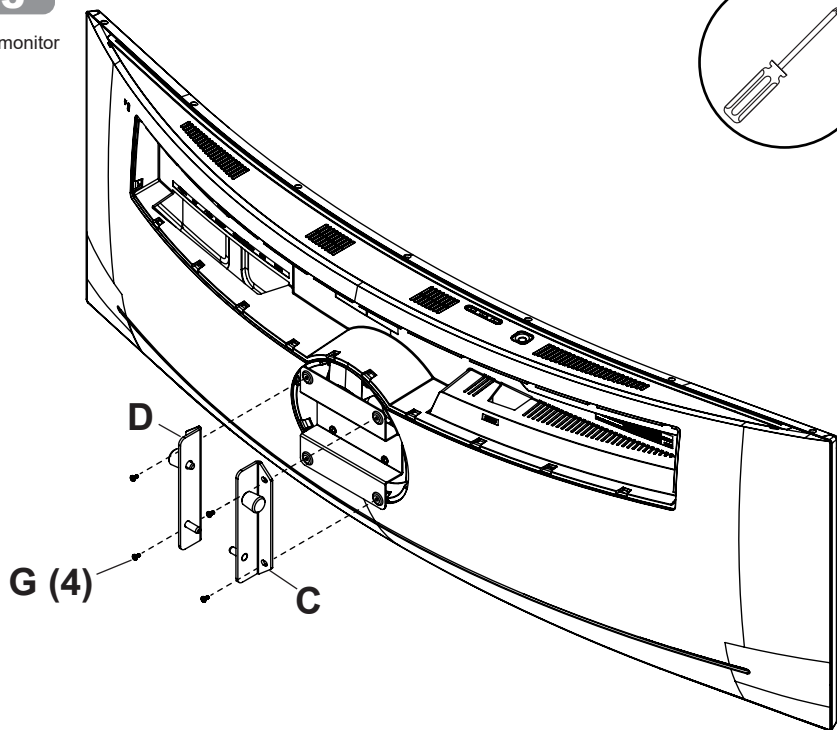




6b-4

ENG Bottom monitor

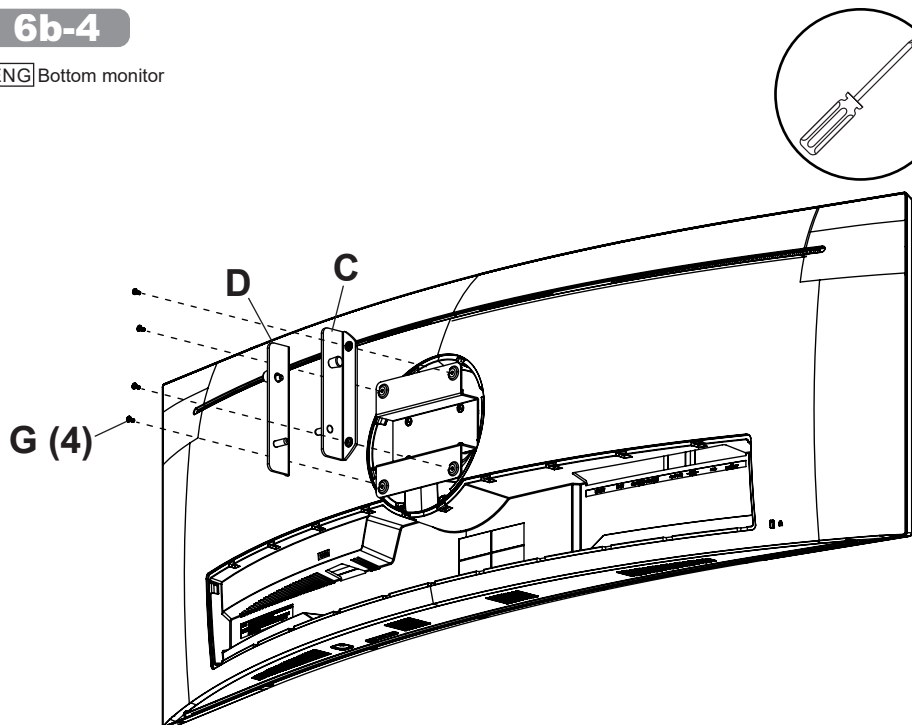


7-1

[ENG] Use adaptor support (B) as a guide to set proper distance between left and right adaptor brackets (D,C) on top and bottom monitor.

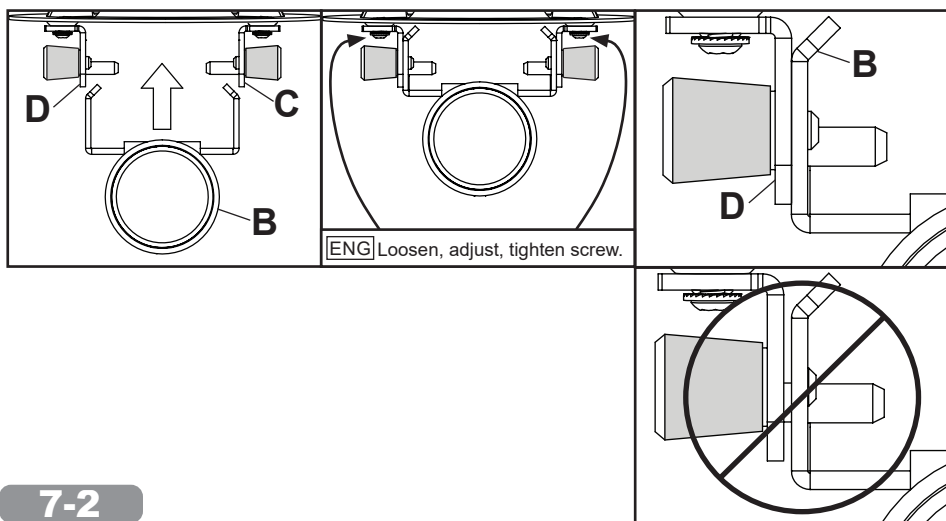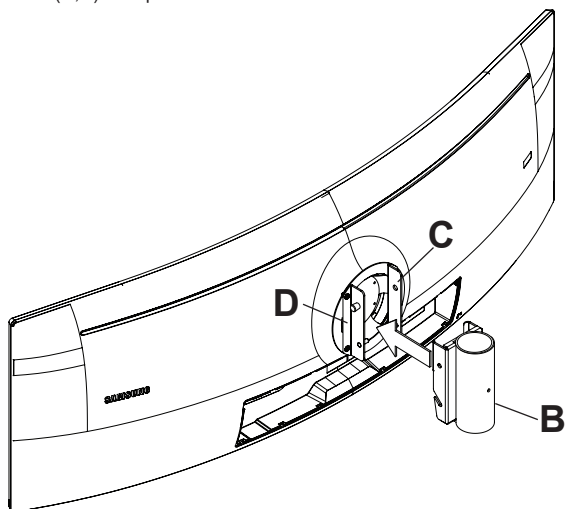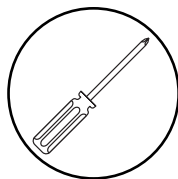


7-2



[ENG] Remove adaptor support (B).

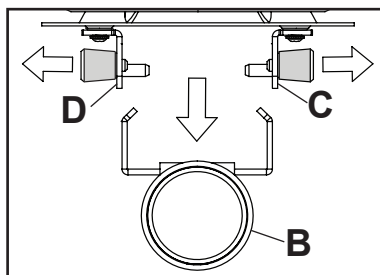

8-1

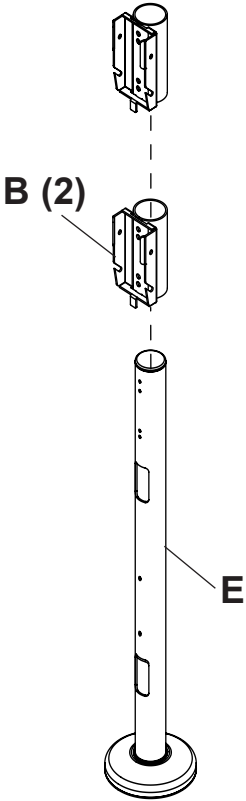



8-2

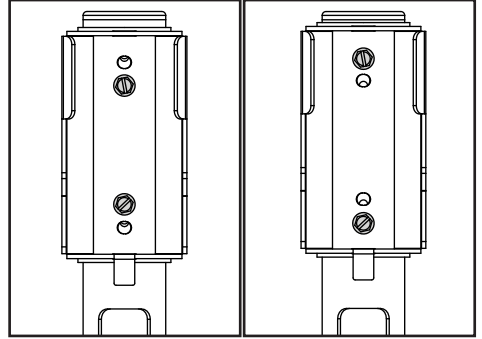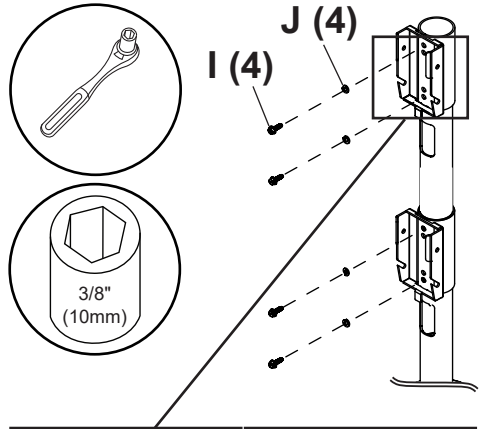



Samsung Super Ultra Wide Curved Monitor
43" (LC43J890DKNXZA)
49" (LC49RG90SSNXZA)
49" (C49RG90SSN)

Samsung Super Ultra Wide Curved Monitor
49" (C49J890DKN)
49" (LC49HG90DMNXZA)
49" (C49HG90DMN)

8-3

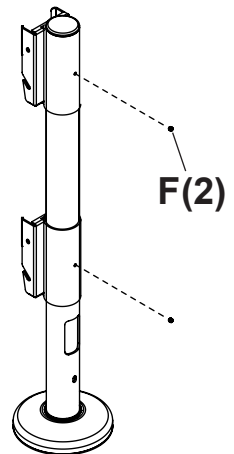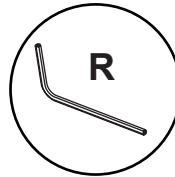

ENG Attach foam strip to top edge of bottom monitor.

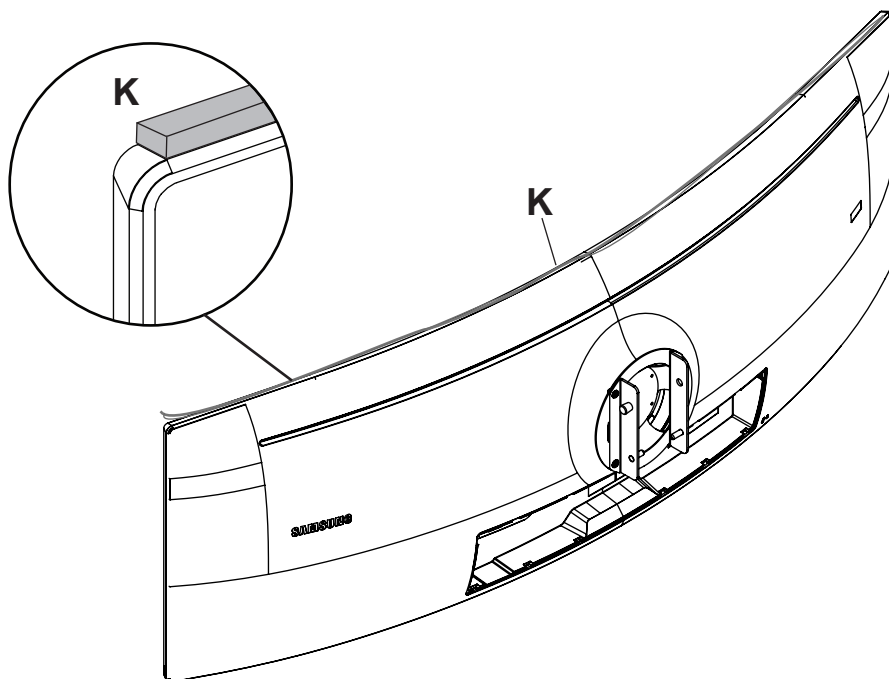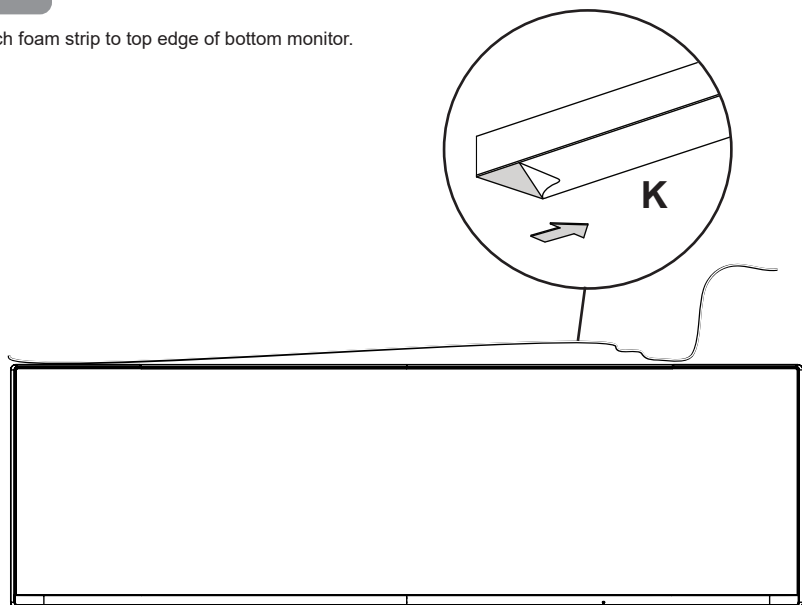


10-1

▲ CAUTION

ENG - Must install top monitor first. Failure to do so could lead to product failure or personal injury.

ENG Top monitor must be installed upside down. Listen for "click."

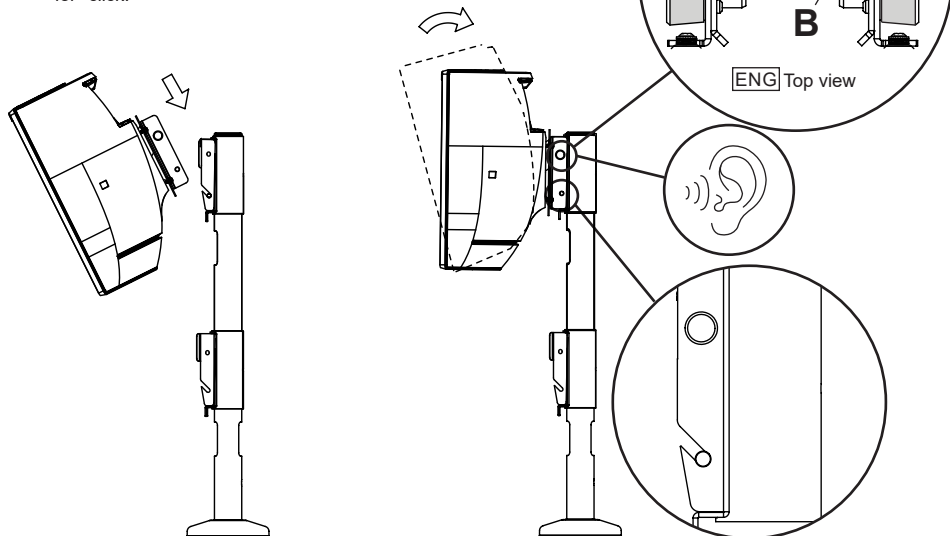


10-2

▲ CAUTION

ENG - Must install top monitor first. Failure to do so could lead to product failure or personal injury.

ENG Install bottom monitor. Listen for "click."

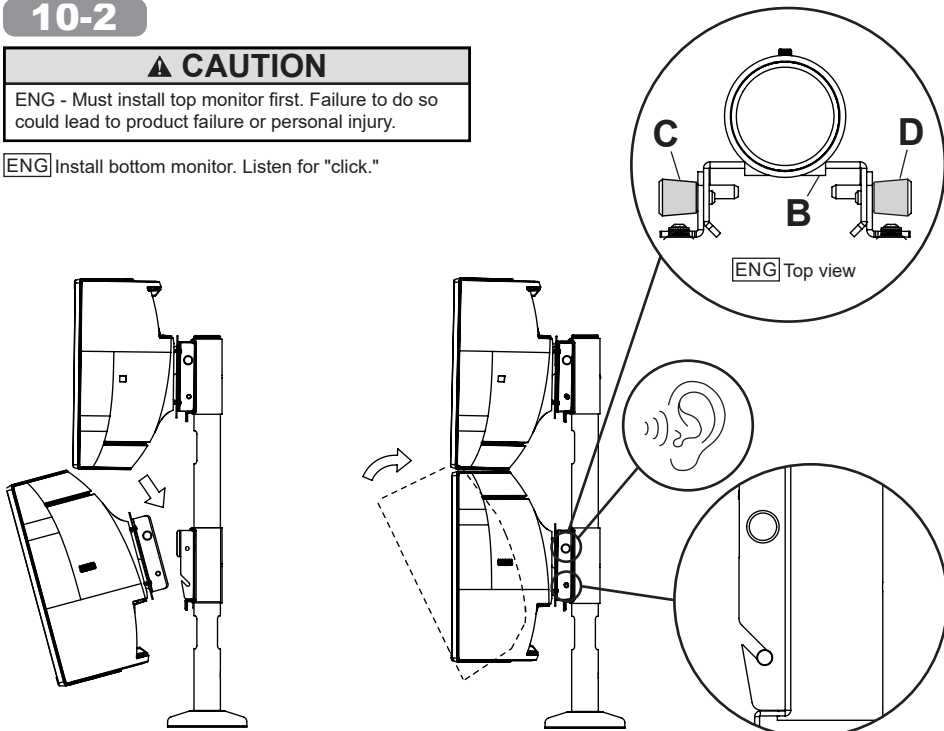


11-1

⚠ WARNING


ENG - Must support weight/front of monitor when disengaging quick release knobs from support tube.

ENG Quick release; Pull knobs to disengage.



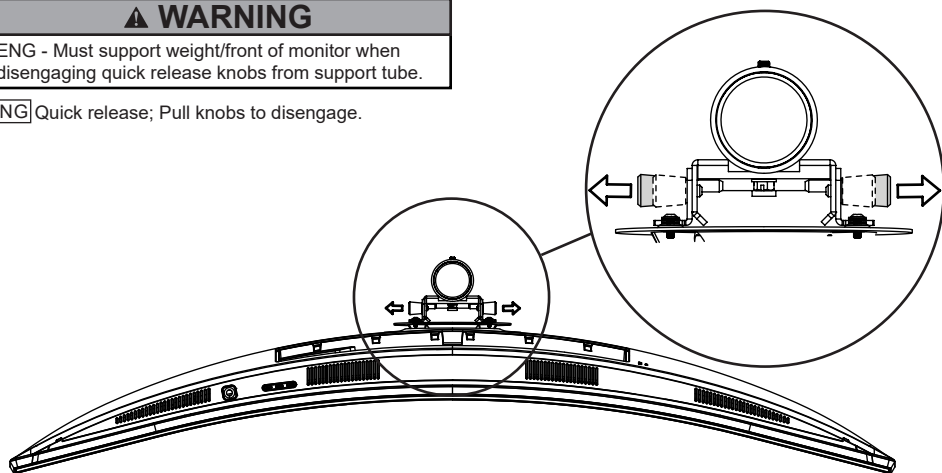


11-2

ENG Support monitor, tilt forward.

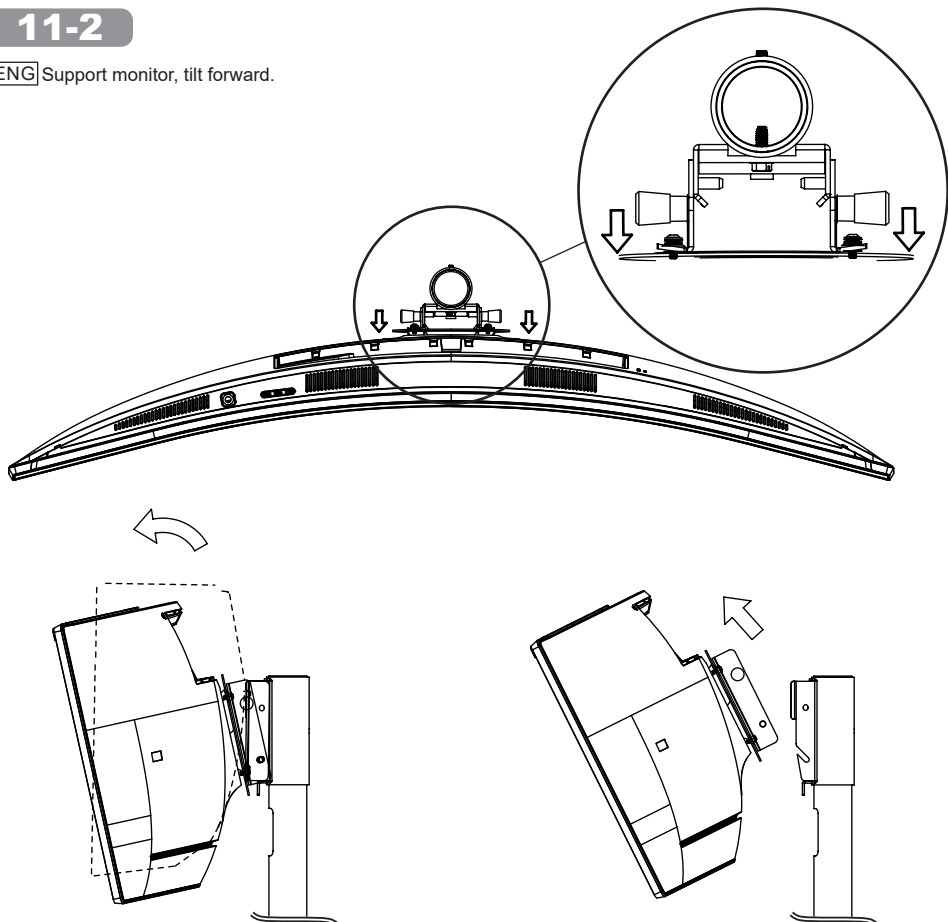


12

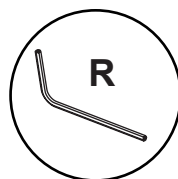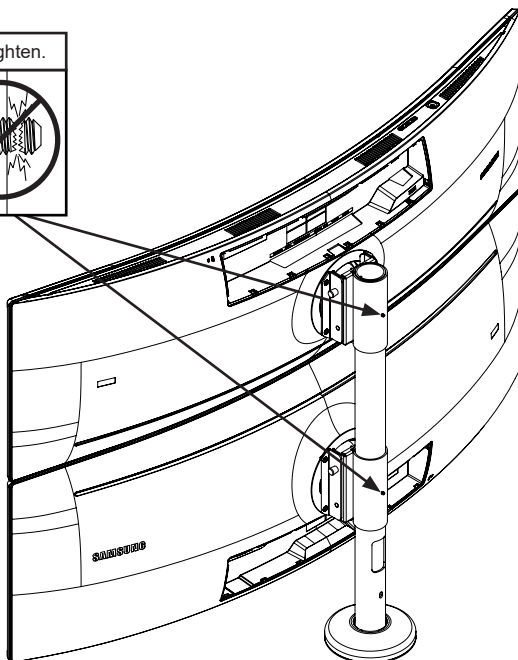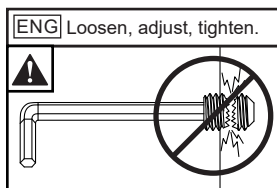

13

ENG Optional: Cable management

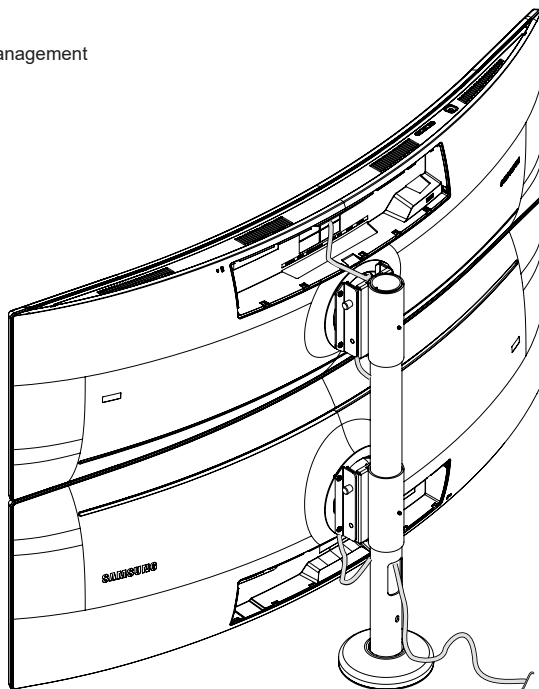

ENG	Warranty	ESP	Garantía	FRN	Garantie	DEU	Garantie	NEL	Garantie
ITL	Garanzia	CES	Záruka	SLK	Záruka	POR	Garantia	TUR	Garanti

www.peerless-av.com/warranty

peerless-AV®

Peerless-AV

2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2021, Peerless Industries, Inc.

Peerless-AV Europe

Unit 3 Watford Interchange,
Colonial Way, Watford, Herts,
WD24 4WP, United Kingdom
Customer Care
44 (0) 1923 200 100
www.peerless-av.com

© 2021, Peerless Industries, Inc.

Peerless-AV América Latina

Av. de las Industrias 413
Parque Industrial Escobedo
General Escobedo N.L., México 66062
Servicio al Cliente
01-800-849-65-77
www.peerless-av.com

© 2021, Peerless Industries, Inc.