


Installation and Assembly - Plasma PC Mount Bracket

Model: DS334


Note: Read instruction sheet before you start installation and assembly.

Before you start check the parts list to insure all of the parts shown are included.


Parts List	Qty.	Part #
Description		
A mount adapter	1	201-1196
B mount attachment bracket	1	201-1198
C clamp bracket	2	201-1199
D M5 x 10 mm socket pin serrated washer head screw	8	510-1126
E M6 x 10 mm socket pin serrated washer head screw	4	510-1066
F M10 x 15 mm penta-pin screw	8	520-9263
G 4 mm security allen wrench	1	560-9646
H penta-pin tool	1	520-9260
I rubber pad (not shown)	12	590-1159

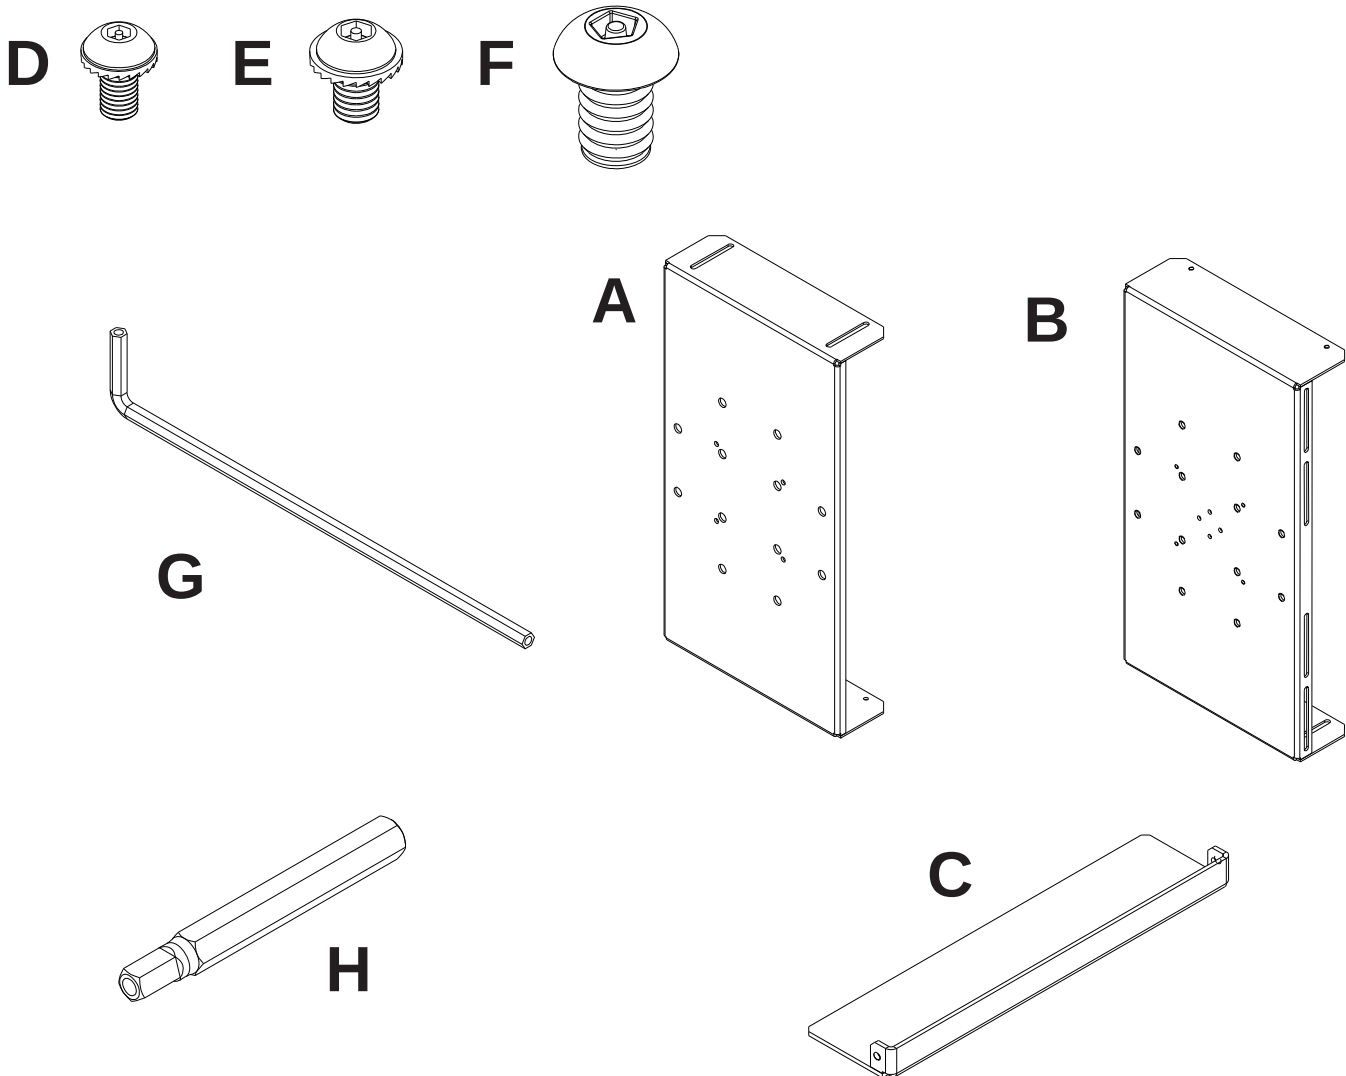


- 1** See accompanying adapter plate instruction sheet to attach adapter plate to screen. Attach mount adapter (**A**) to adapter plate with four M10 x 15 mm penta-pin screws (**F**).

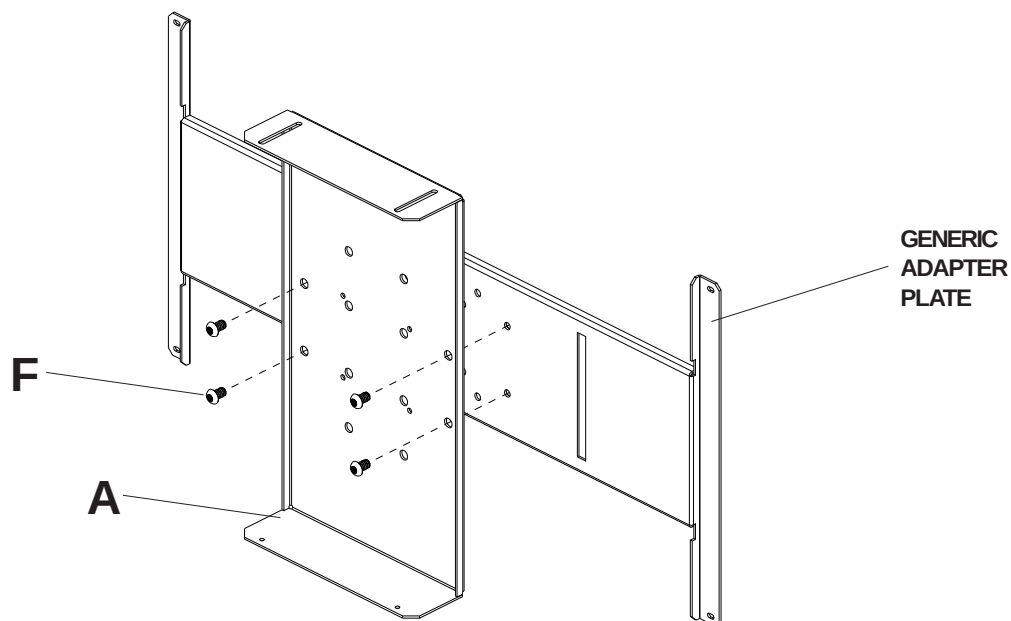


- 2** Attach two clamp brackets (**C**) to mount attachment bracket (**B**) using four M5 x 10 mm socket pin serrated washer head screws (**D**). Leave M5 x 10 mm socket pin serrated washer head screws (**D**) loose. Place four rubber pads (**I**) on clamp brackets (**C**) as shown.

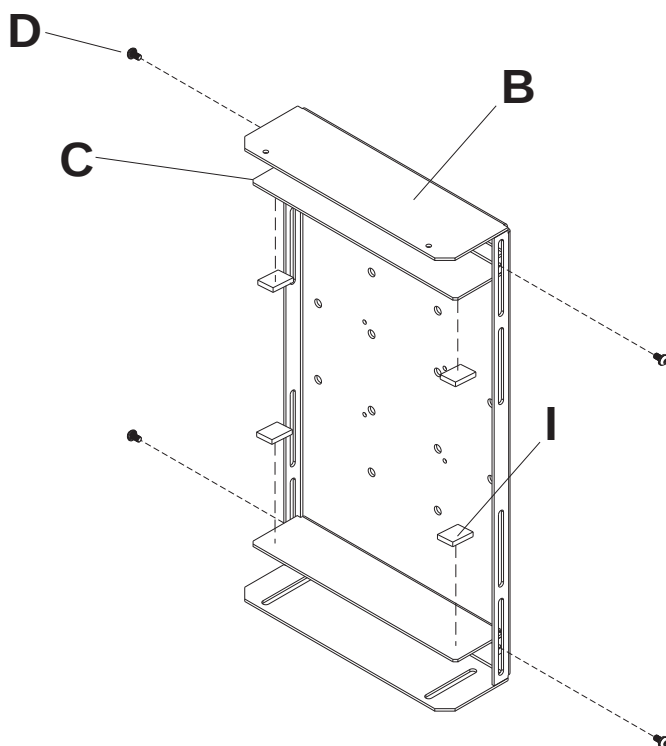

- 3** Attach eight rubber pads (**I**) to computer. Each pad should be approximately 5.13 in (130 mm) away from center of computer as shown below.

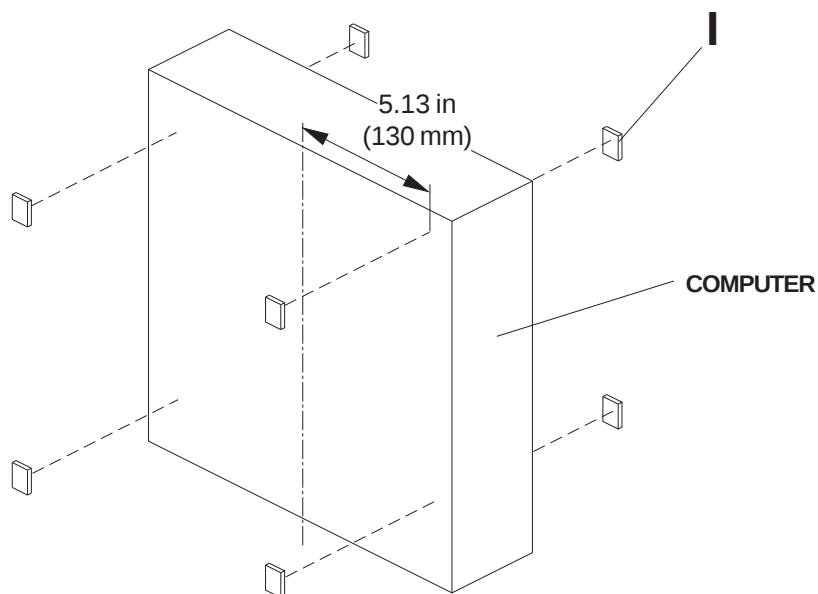

- 4** Place computer between clamping brackets (**C**). Attach mount adapter (**A**) to mount attachment bracket (**B**) using four M6 x 10 mm socket pin serrated washer head screws (**E**). Tighten all fasteners.

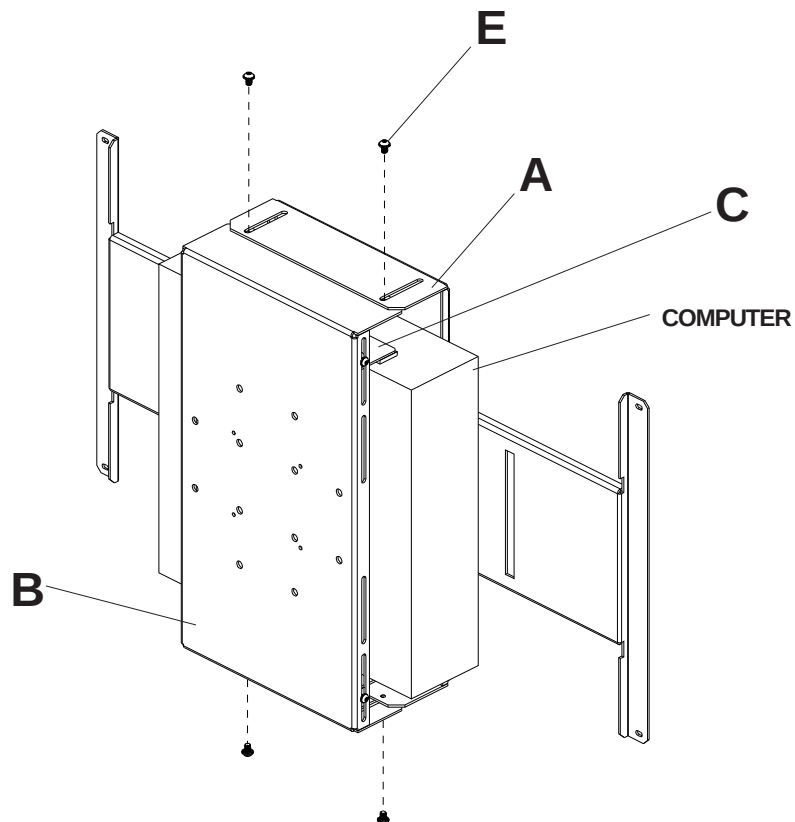

5

Attach mount to mount attachment bracket (**B**) using four M10 x 15 mm penta-pin screws (**F**) or four M5 x 10 mm socket pin serrated washer head screws (**D**) as shown below.

