




Installation and Assembly: Ventilation Maximizing Risers


Models: ACC-FV, ACC-V

Note: Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, please call Peerless Customer Care at 1-800-865-2112.


Parts List			
Description	Qty.	ACC-FV	ACC-V
		Part #	Part #
A foot, black	4	600-0223	-
B velcro circle	8	600-0224	600-0224
C adhesive tape	4	570-0053	-

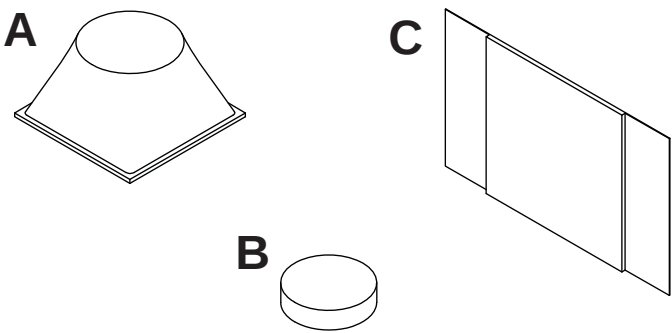


1 **Note:** To properly support the HD Flow unit, 4 feet (A) MUST be used for this installation. Choose a location to install your HD Flow unit. Remove the adhesive tape (C) from its white paper backing and apply adhesive side down to the approximate areas shown, on either side of the unit, making sure not to obstruct the HD Flow units venting slots.

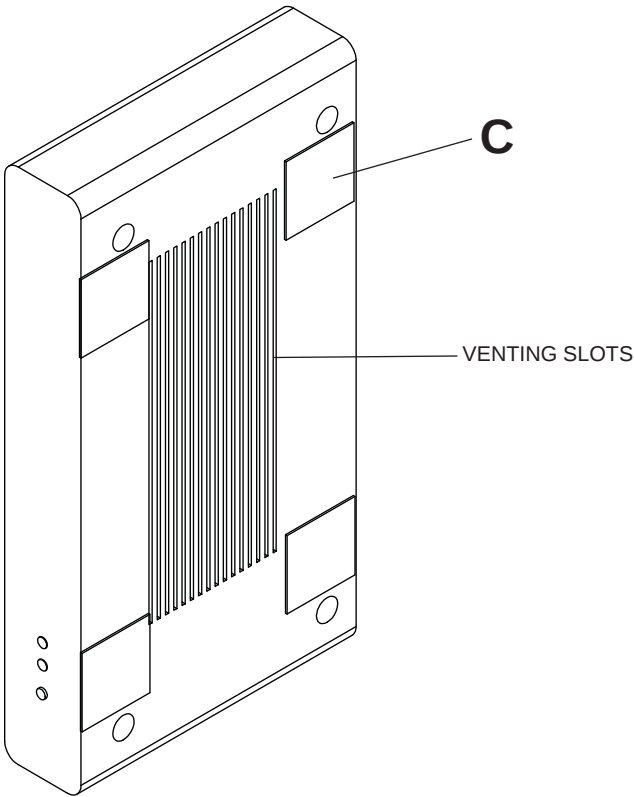


- 2** Remove red covering from adhesive tape (C). Remove white paper backing from each foot (A) and apply adhesive side of foot (A) to adhesive tape (C).

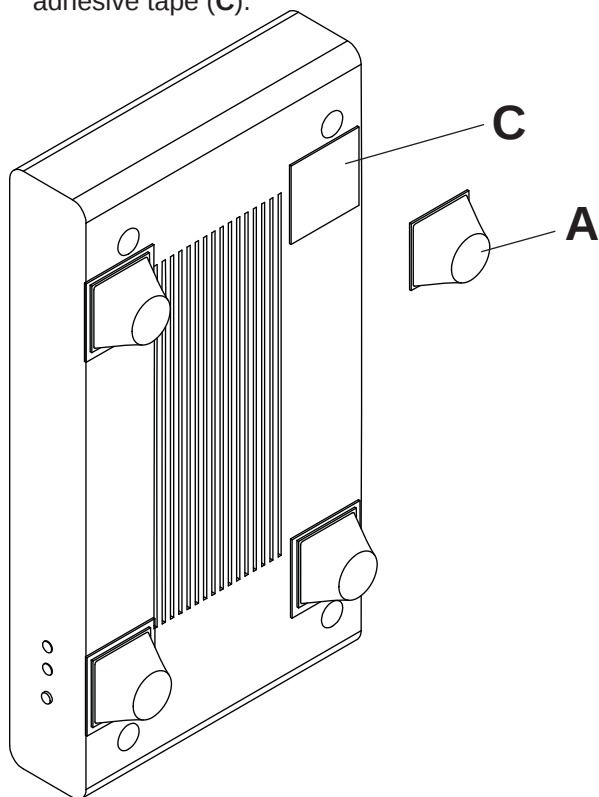

- 3** Remove the white paper backing from four velcro circles (B) and apply, adhesive side down, to each foot (A).

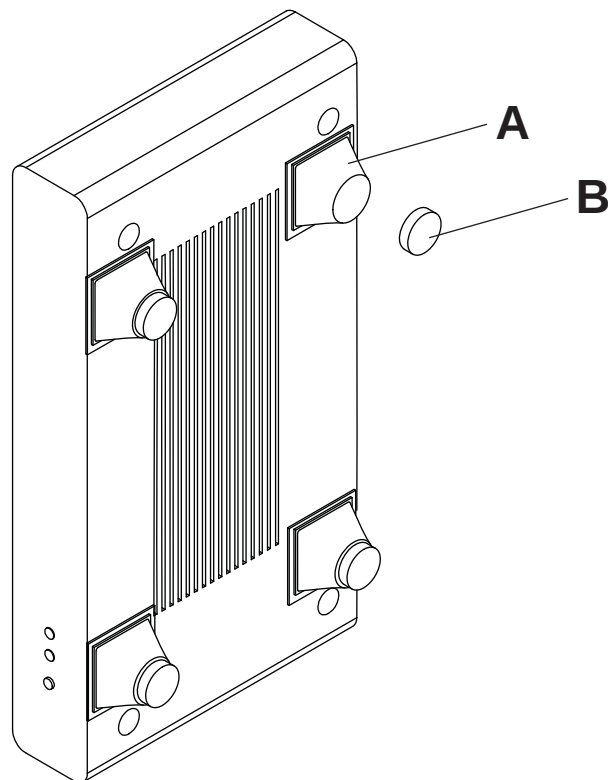

- 4** Place the remaining four velcro circles (B) onto the circles previously installed so that the white paper backing is facing outward.

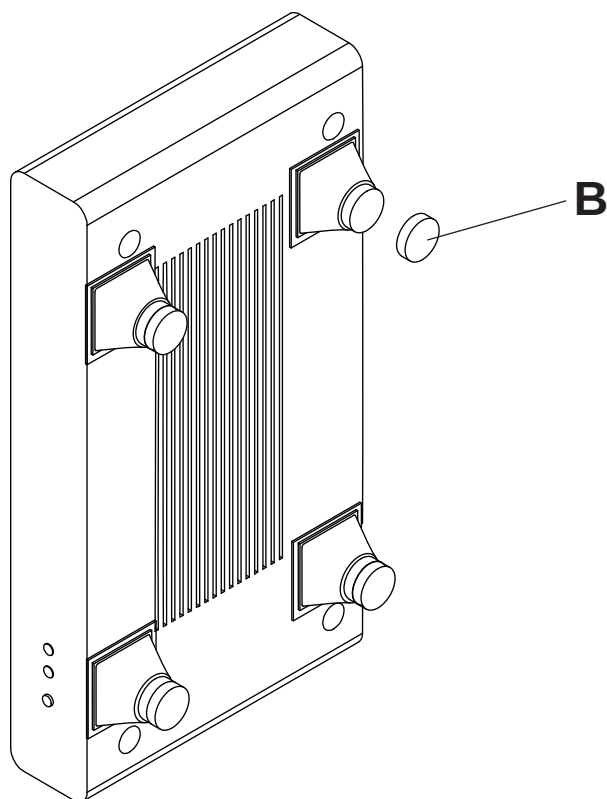

- 5** **Note:** Double check the desired placement of your HD Flow unit prior to adhesion. Changing the units placement after initial adhesion will result in premature adhesive failure.

Remove the white paper backing from the velcro circles (B) and attach your HD Flow unit to your desired location.

To install your HD Flow unit in another location, additional velcro circles may be purchased. Call Customer Care at (800) 865-2112 and order part number ACC-V.

peerless-AV

Peerless-AV
3200 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2011, Peerless Industries, Inc.