




Installation and Assembly:

Rubber Bumpers for White Board mounts


Model: ACC956

Parts List		
Description	Qty.	Part #
A round rubber bumpers	8	600-0236

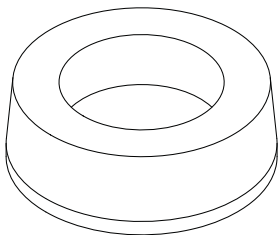

Refer to mount instruction manual for attaching vertical brackets to white board, cable management, and safety warnings.

- 1
- Set vertical brackets onto back of white board to determine where mounting holes will be.

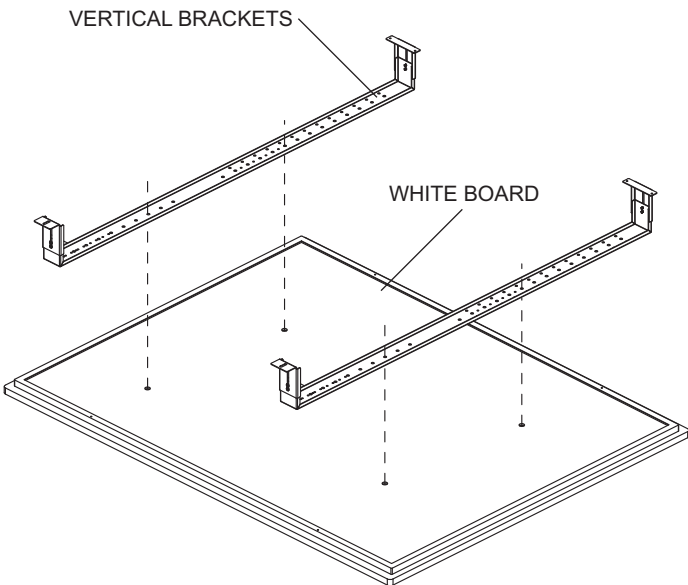

- 2
- Apply eight rubber bumpers (A) evenly spaced onto front of two vertical brackets as shown.

NOTE: Be sure not to cover up mounting holes determined in step 1.

