

peerless-AV[®]

ACC-DTTP3



Fully assembled topper shown

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.









Tools Needed for Assembly

- 1/2" socket
- 7/16" socket
- Ratchet
- 1/2" combination wrench
- 7/16" combination wrench
- 5' step ladder (not shown above)

Before you begin, make sure all parts shown are included with your product.

Parts List			
	Description	Qty	Part #
A	right topper	1	150-T1300
B	left topper	1	150-T1302
C	gusset	4	150-T1304
D	1/4" x 1" bolt	3	520-0855
E	1/4" nut	3	530-0091
F	1/4" washer	6	540-0665
G	5/16" nut	12	530-0090
H	5/16" washer	12	540-0663

Parts may appear slightly different than illustrated.

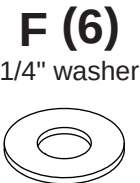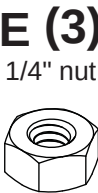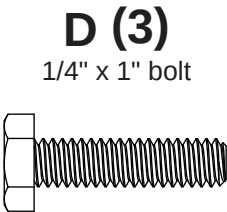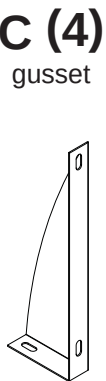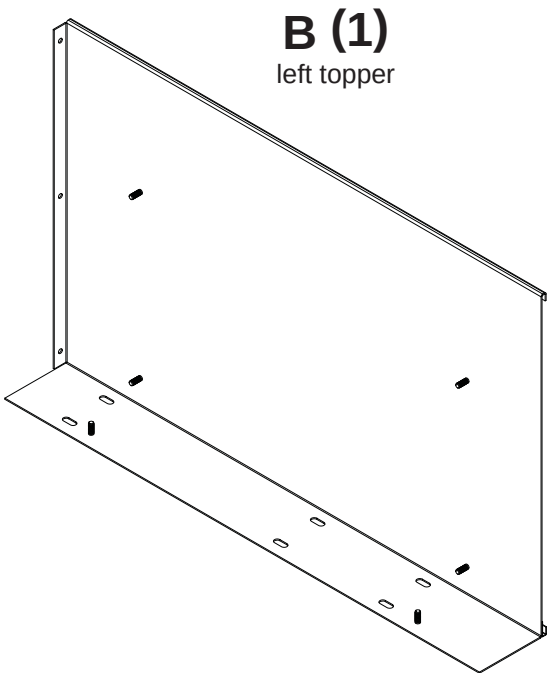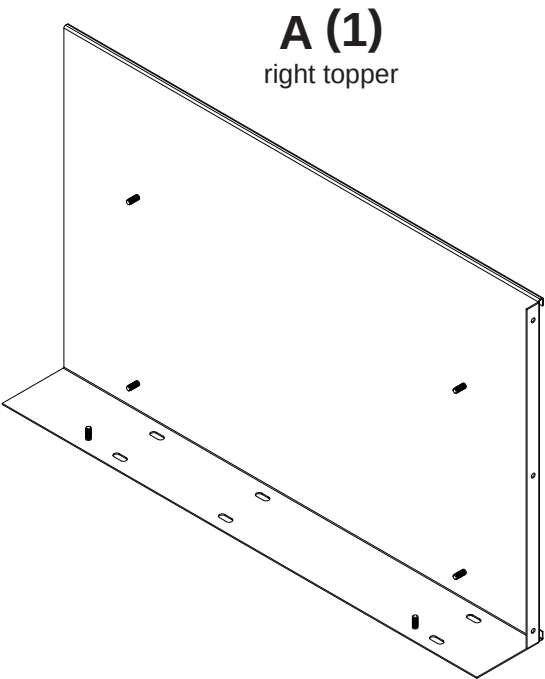

1

Remove the existing rain cap

In order to install the topper it will be necessary to remove the rain cap. Loosen the top (12) $\frac{1}{4}$ " Phillips head screws and remove the rain cap (see Illustration "A"). Remove the gussets and keep the (12) $\frac{5}{16}$ "x 1" bolts and (12) $\frac{5}{16}$ " sealing washers (see Illustration "B"). This is the hardware that is needed to install the topper.



Illustration "A" (rain cap)



Illustration "B" (gussets)

2

Install topper right (A)

Set the right topper on top of the cabinets making sure that all the holes line up. Make sure the back flange of the topper is even with the back and right edges of the cabinet. Hand tighten (6) 5/16" bolts with sealing washers through the bottom flange of the topper to the top of the cabinets. See Illustration "C".



Illustration "C" (back of topper shown)

3

Install topper left (B)

Set the left topper on top of the cabinets making sure that all the holes line up. Make sure the back flange of the topper is even with the back and left edges of the cabinet. Hand tighten (6) 5/16" bolts with sealing washers through the bottom flange of the topper to the top of the cabinets. Hand tighten (3) 1/4"x 1" bolts, (6) washers and (3) nuts in the center connecting seam (see Illustration "D"). Make sure that both topper halves are lined up and true. Firmly tighten all the 5/16" and 1/4" bolts in place using the 1/2" and 7/16" socket and ratchet. See Illustration "E".



Illustration "D" (back of topper shown)



Illustration "E" (back of topper shown)

4

Install topper gussets (C)

Install the (4) topper gussets by starting from either the left or right end first. Push the back of the topper forward to make room for the slots in the gusset. Slide the gusset over the (3) 5/16" threaded studs mounted on the topper and loosely secure using 5/16" nuts and washers (see **Illustration "F"**).



Illustration "F"

Once all (4) gussets have been put in place, tighten the 5/16" nuts using the ½" socket and ratchet. See **Illustration "G"**.



Illustration "G" (back of topper shown)

The installation is complete. Now install the Coroplast or magnetic graphic.



Peerless-AV
2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2014, Peerless Industries, Inc.

Peerless-AV Europe
Unit 3 Watford Interchange,
Colonial Way, Watford, Herts,
WD24 4WP, United Kingdom
Customer Care
44 (0) 1923 200 100
www.peerless-av.com

© 2014, Peerless Industries, Inc.

Peerless-AV de Mexico
Ave de las Industrias 413
Parque Industrial Escobedo
Escobedo N.L Mexico 66050
Servicio al Cliente
01-800-849-65-77
www.peerless-av.com

© 2014, Peerless Industries, Inc.