


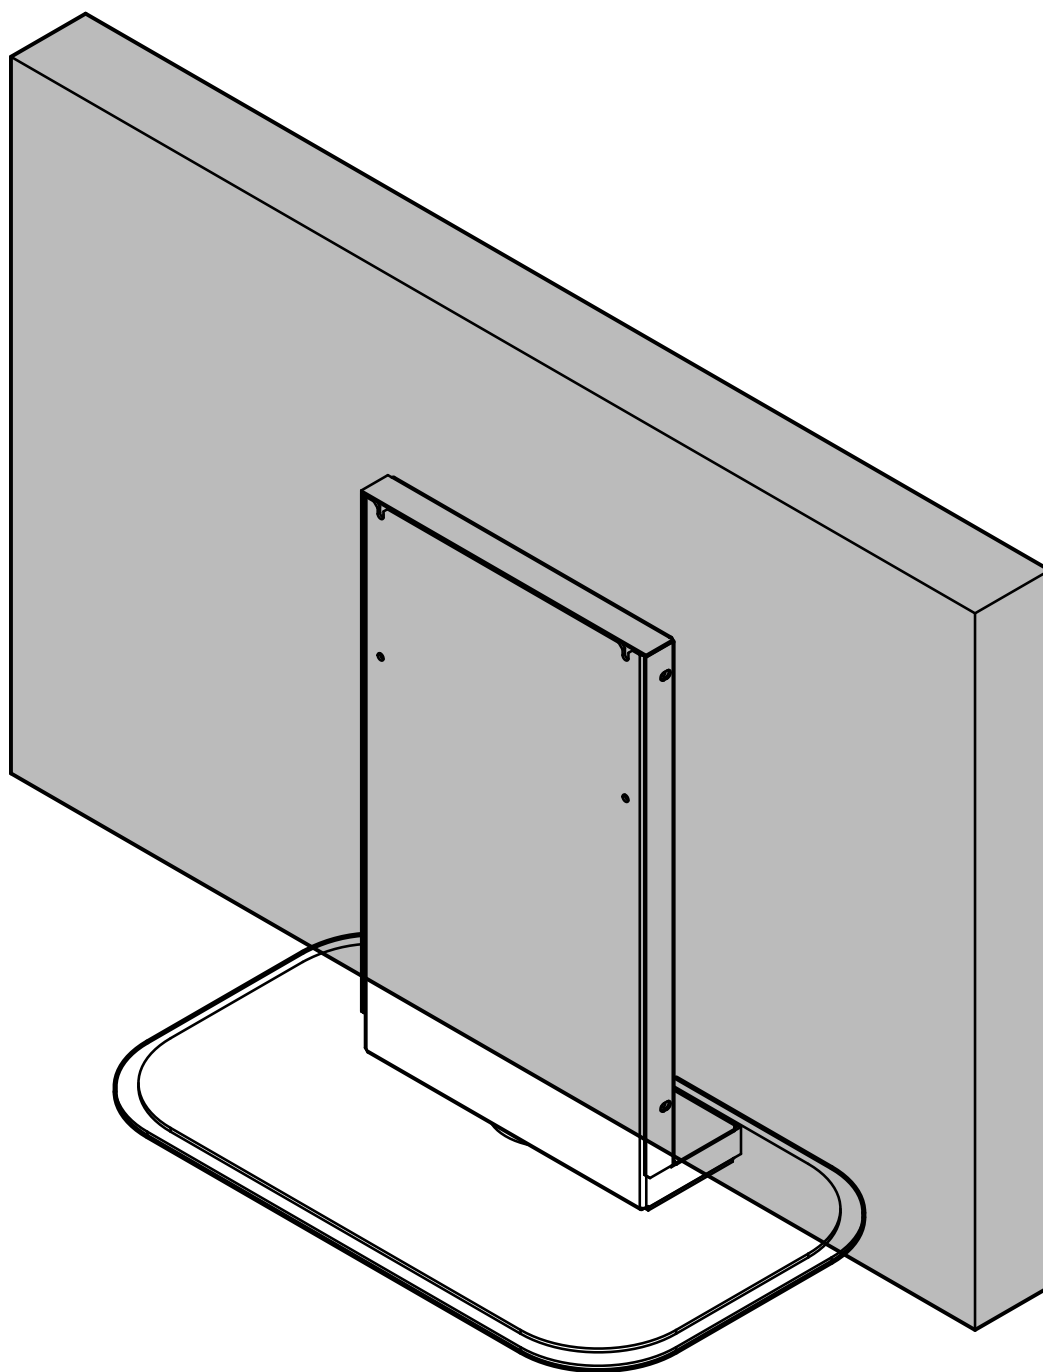




Installation and Assembly: Swivel Base Stand for 32" LG Hospital TV (32LQ630H)

Model: HCP432-LG-001



Parts List


Description	Qty.	Part #
A base assembly	1	091-1087
B base cover plate	1	091-1074
C 1" x 1" foam pad	6	570-0008
D M4 x 12 mm phillips screw	9	504-9013
E #10 flat washer	4	540-9400
F M5 x 10 mm phillips screw	1	520-1233

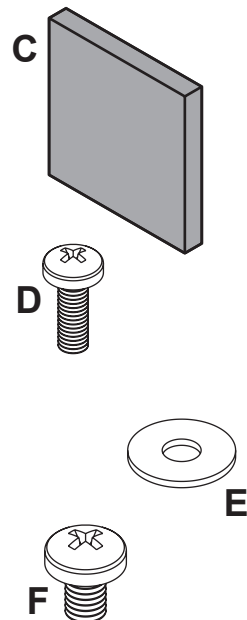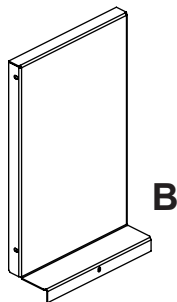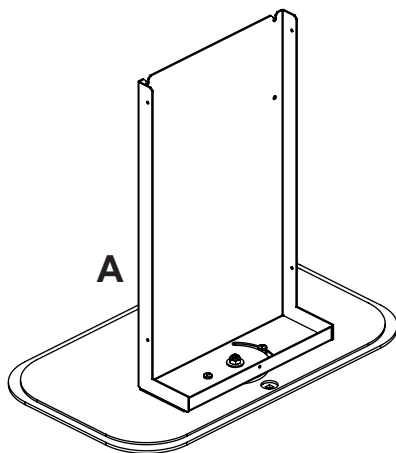

Optional


- Secure one M5 x 10 mm screw (F) into base assembly (A) as shown in Figure 1 if no swivel is desired.

- Secure six foam pads (C) to bottom of base assembly (A) as shown in Figure 2.

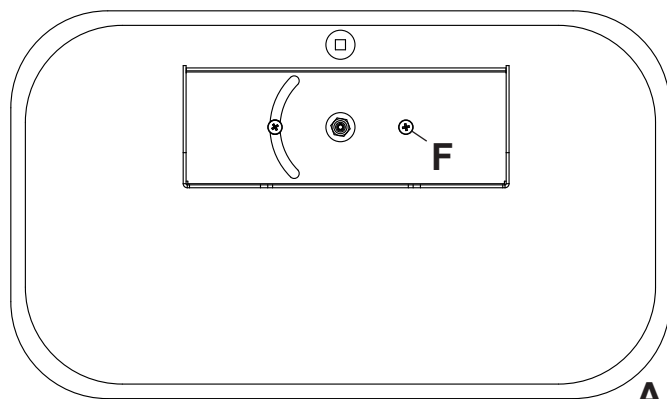

TOP

A

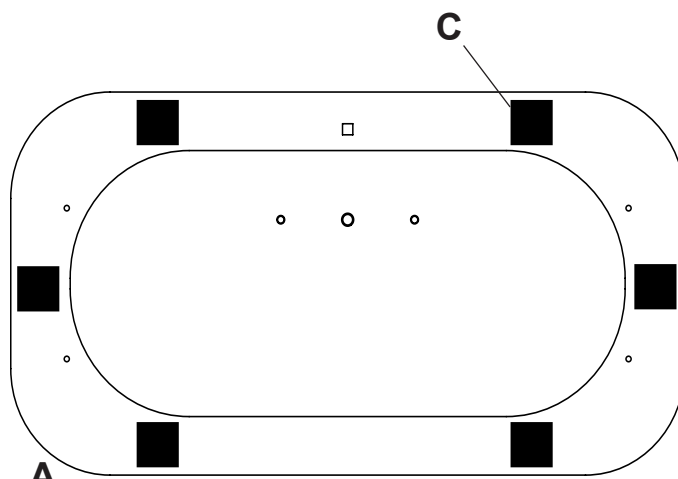

A


BOTTOM

Figure 1

Figure 2

- 3** Secure two M4 x 12 mm phillips screws (**D**) to top mounting positions of display leaving 1/8" of threads exposed as in Detail 1.

Hook display onto base assembly (**A**) as shown in Figure 3.2

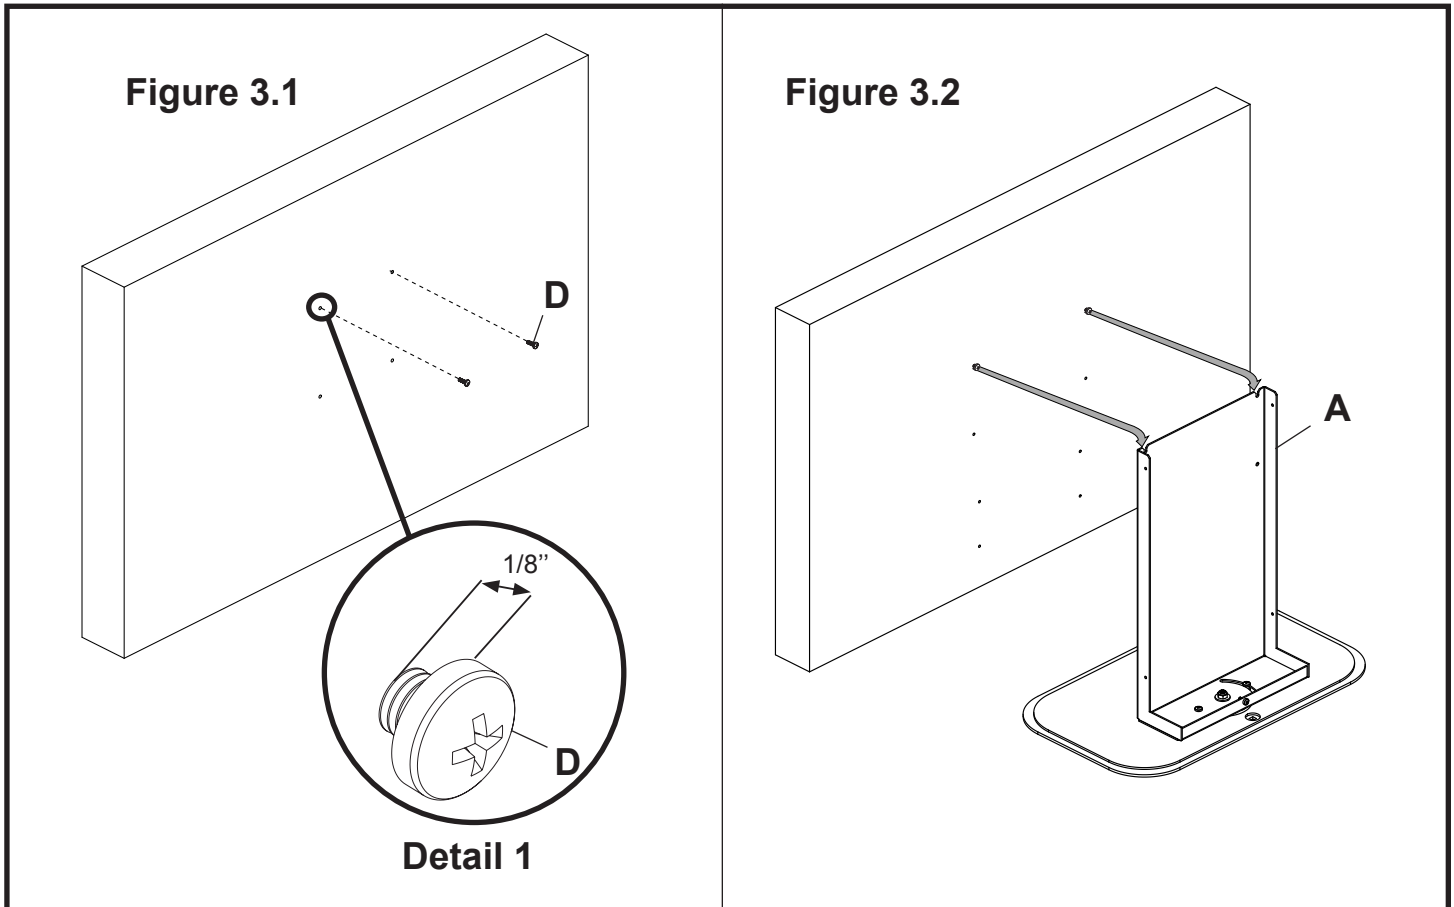

- 4** Fasten two additional M4 x 12 mm phillips screws (**D**) to display and tighten remaining screws as shown in Figure 4.

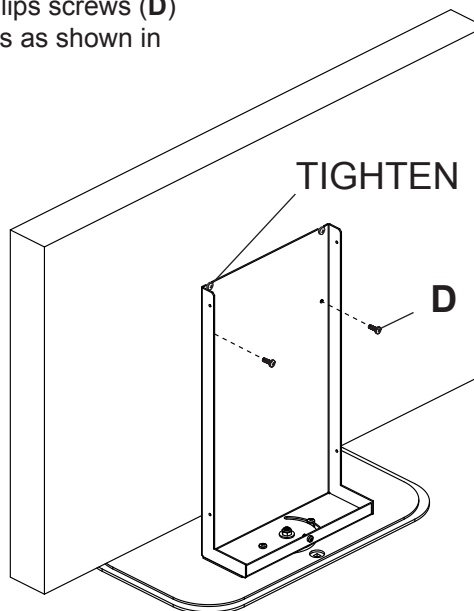


Figure 4

- 5** Attach base cover plate (**B**) into position on base assembly (**A**) as shown in Figure 5.1.
- Secure base cover plate (**B**) in position using four M4 x 12 mm phillips screws with four #10 flat washers on both sides of the base cover plate. Secure a fifth M4 x 12 mm phillips screw (**D**) to base cover plate (**B**) in the rear facing position as shown in Figure 5.2

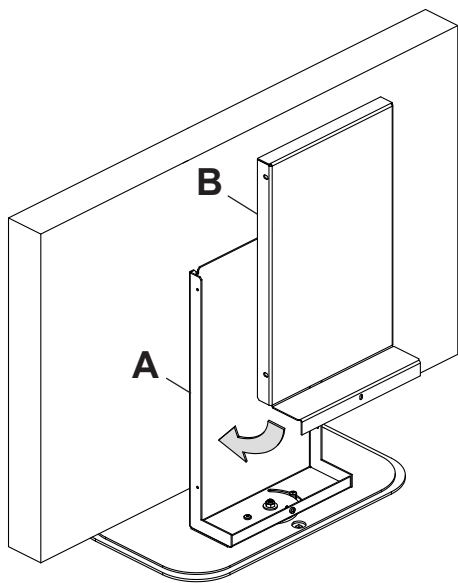


Figure 5.1

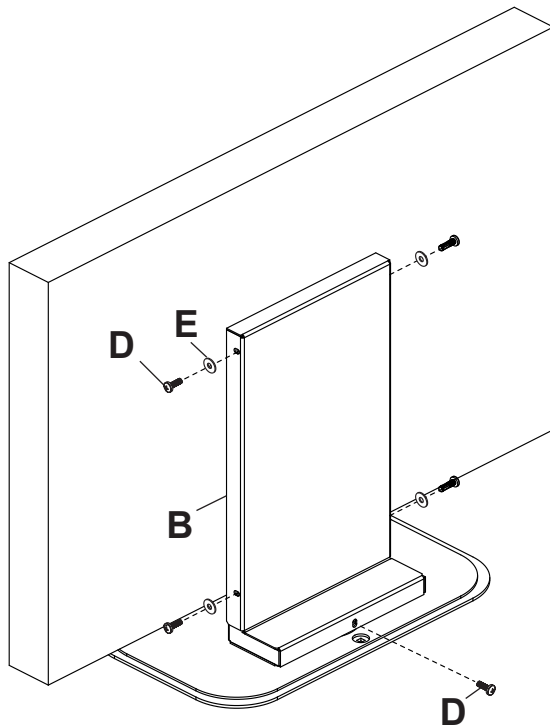


Figure 5.2